




YAZOO

Parts Manual for FRONT CUT RIDERS MODELS: YTBS-D265

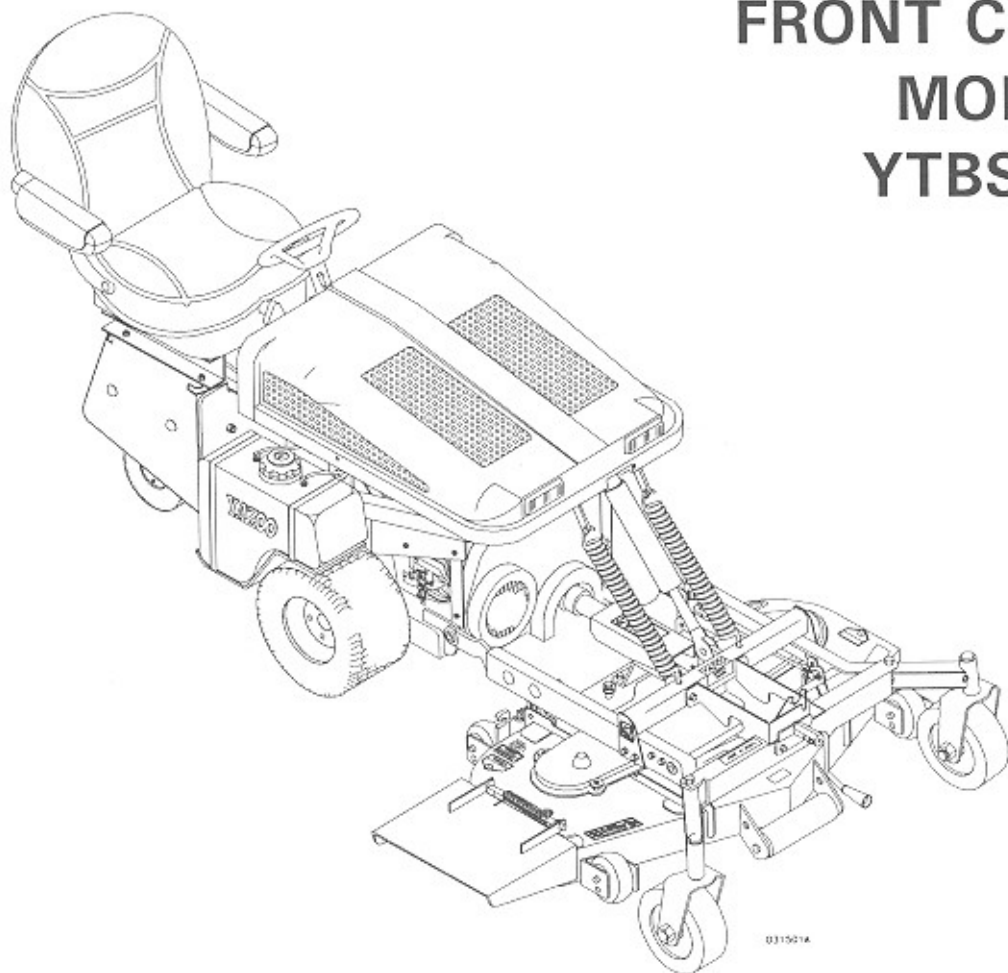

**Professional Quality Lawn Care Equipment
since 1945**

Yazoo Power Equipment, L.L.C. policy is to improve its products whenever it is possible and practical to do so. In a effort to keep pace with changes in technology, Yazoo reserves the right to make changes or improvements at any time without incurring any obligation to make such changes on products previously manufactured.

MANUAL # 1301-316 (2487-1-7/97)

CONTENTS



**REFER TO YOUR OPERATOR MANUAL FOR
SAFE OPERATING INSTRUCTIONS.**


Guards & Shields.....	3
Belt Guard	
Frame Assembly	
Headlights	
Decals	
Dash Panel.....	4
Ammeter	
Hour Meter	
Inclinometer	
Throttle Control	
Key Switch	
Park Brake Lever	
Engine Components.....	6
Engine	
Transmission Idler Mount	
Transmission Belt	
Pulley	
Drain Valves	
PTO Drive.....	7
Engine Mount	
Pulley PTO	
Belts	
PTO Shaft	
Brake Band	
Steering Components	9
Steering Wheel	
Steering Shaft & Bearings	
Steering Linkage	
Wheel & Rim Assembly	
Engine Components Radiator	10
Radiator	
Hoses	
Screen	
Overflow	
Fuel System.....	12
Fuel Lines	
Fuel Tank & Mounting Components	
Fuel Filters, Fuel Valve	
Exhaust System.....	13
Mufflers	
Blade Control Lever.....	14
Switch	
Blade Engagement Lever	
Linkage	

Operator Seat	15
Tractor Seat & Mounting Components	
Seat Switch	
Rider Weight	
Battery Mount Bracket	
Transmission Drive System.....	16
Switch	
Hydro Pedal	
Linkage	
Axle Assembly.....	18
Axle Assembly	
Brake Drum	
Drive Tire & Rim Assembly	
Brake System.....	19
Wheel Brake Components	
Linkages	
Park Brake Pedal	
Turn Pedals	
Hydraulic System.....	22
Mower Deck Lift Components	
Hydro Transmission	
Transmission Pulley & Fan	
Transmission Control Arm	
Transmission	
Hydrostatic Differential.....	24
Tractor Axle Components	
Brake	25
Brake Drum & Pads	
Transmission.....	26
Transmission Components	
Steering Components Dual Wheel.....	27
Steering Wheel	
Steering Gears	
Steering Shaft & Bearings	
Steering Linkage	
Wheel & Rim Assembly	
Decals.....	28
Safety Messages	
Electrical System.....	29
Wiring Harness	



WARNING


THE ENGINE EXHAUST FROM THIS PRODUCT
CONTAINS CHEMICALS KNOWN TO THE STATE
OF CALIFORNIA TO CAUSE CANCER, BIRTH
DEFECTS OR OTHER REPRODUCTIVE HARM.

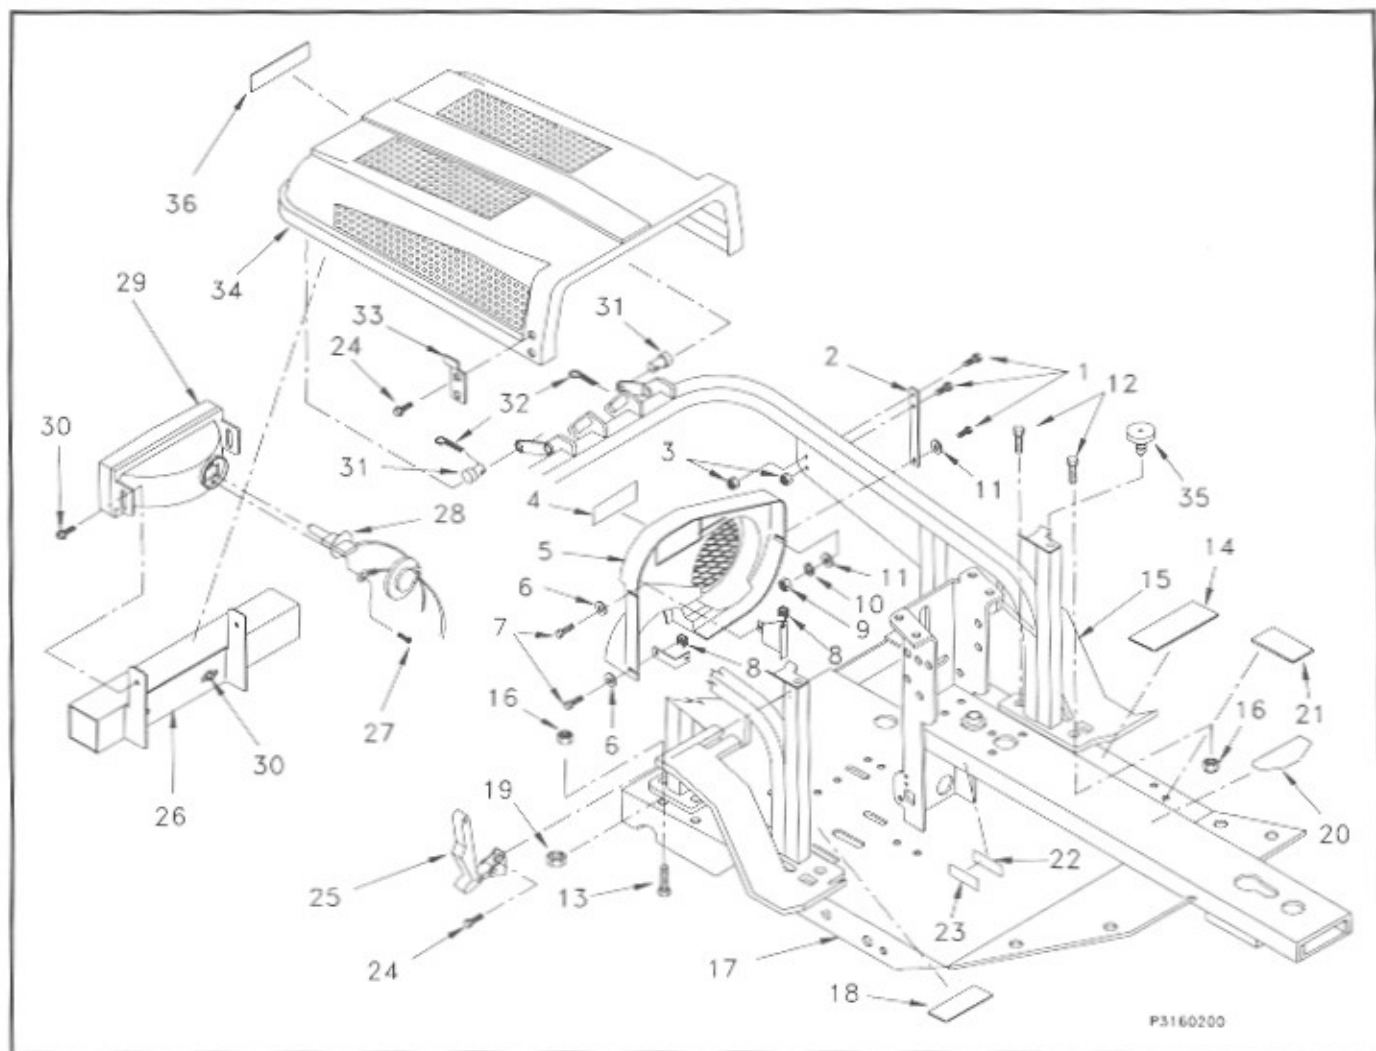

P3160200

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0209-108	HHCS, 5/16C x 3/4 (3)	19	1401-150	Nut, 1/2-13 Jam Hex (2)
2	0214-554	Brk't, Belt Guard	20	0401-221	Decal, ANSI, B74.1
3	1401-141	Nut, 5/16C Nyloc (2)	21	0401-434	Decal, Park Brake
4	0401-448	Decal, Front Belt Guard	22	0401-404	Decal, Serial Plate
5	0704-382	Guard, Belts Assy.	23	0401-406	Decal, Clear
6	2301-020	Washer, 1/4 Flat (2)	24		Part of item 25
7	0209-021	HHCS, 1/4C x 3/4 (2)	25	1208-029	Latch, Hood (2)
8	1401-149	Nut, 1/4C Retainer (2)	26	0214-633	Brk't., Tractor Headlight
9	1401-020	Nut, 5/16C Hex	27		Part of item 29
10	2301-004	Washer, 5/16 Lock	28	0230-004	Bulb (2)
11	2301-021	Washer, 5/16 Flat (2)	29	1105-180	Headlight (2)
12	0209-848	HHCS, 1/2C x 1-1/4 (4)	30	1901-239	Screw, #10 x 3/8 Slotted(4)
13	0209-853	HHCS, 1/2C x 1-3/4 (2)	31	1604-192	Pin, 3/8 x 1-1/4 Clevis (2)
14	0401-429	Decal, Ground Speed	32	1601-193	Pin, 1/8 x 3/4 Cotter (2)
15	0605-508	Frame, Hydro Lift	33		Part of item 25
16	1401-142	Nut, 1/2 Hex Nyloc (8)	34	0804-112	Hood, Diesel
17	0605-510	Frame	35	0216-011	Bumper, Rubber (2)
18	0401-436	Decal, Wheel brake	36	0401-454	Decal, YAZOO


DASH PANEL

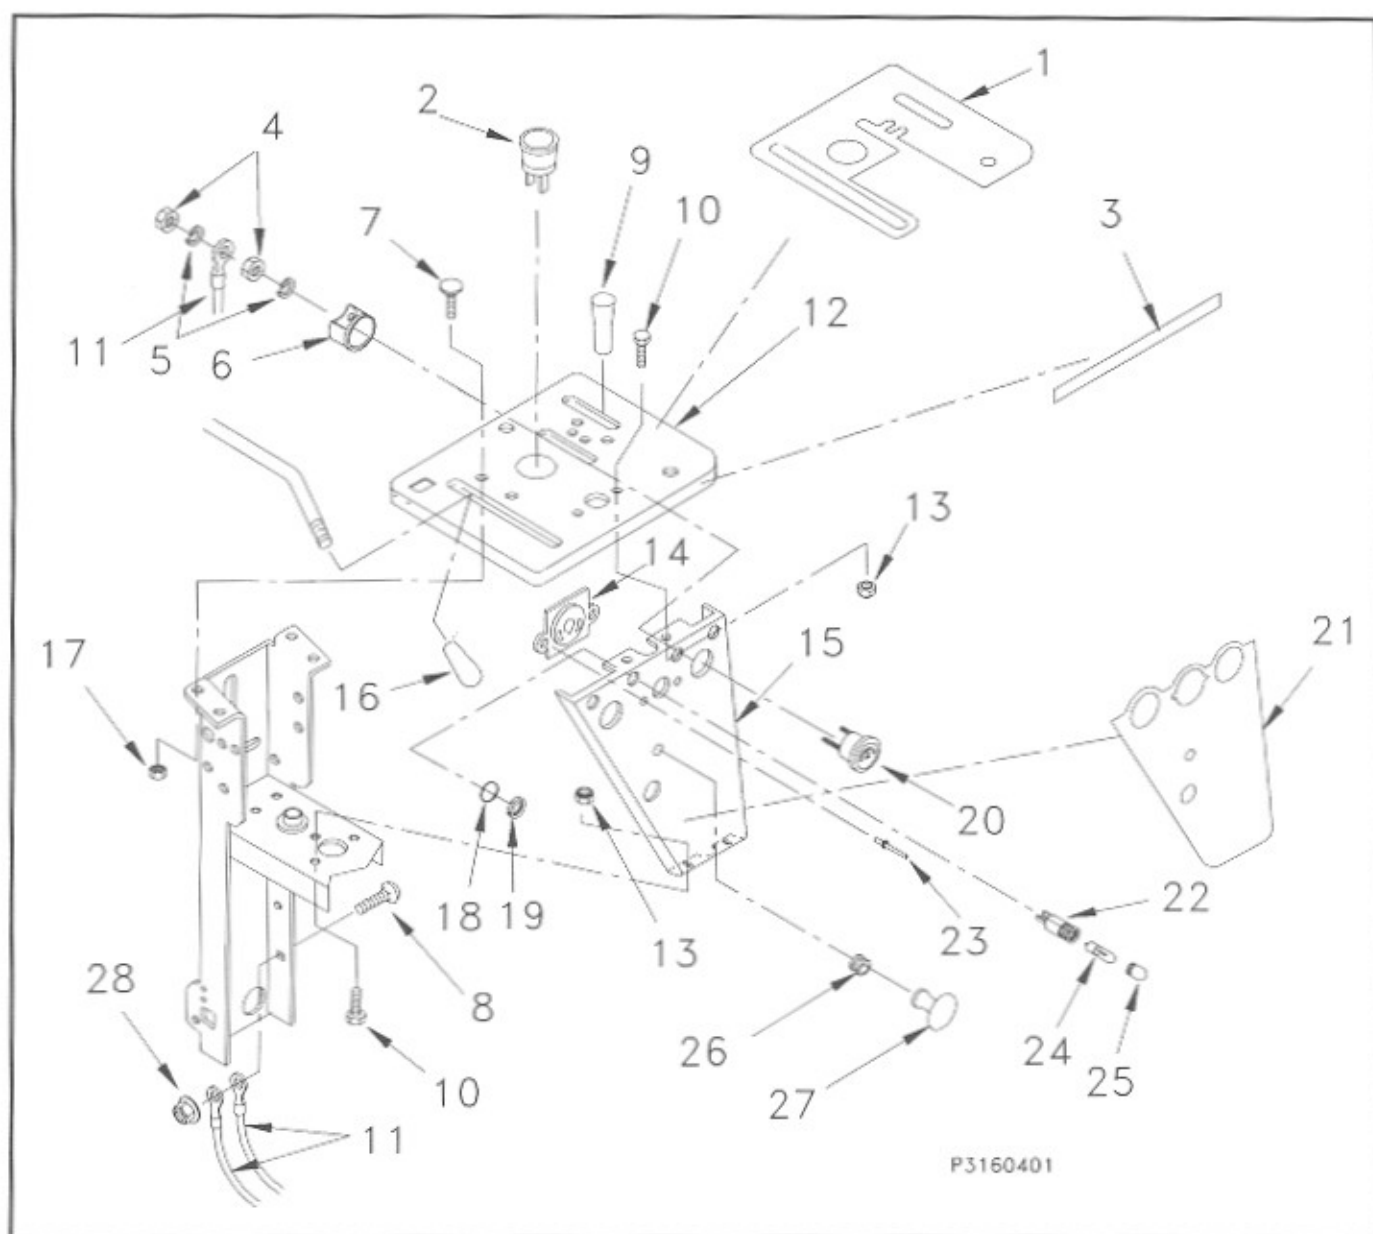

P3160401

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0401-449	Decal, Console	16	1104-022	Knob, Blade Control
2	0706-003	Gage, Hour Meter	17	1401-130	Nut, 1/4-20 Hex (5)
3	0401-451	Decal, Panel Light	18		Part of item 25
4	1401-197	Nut, 10-32 brass Hex (4)	19		Part of item 25
5	2301-001	Washer, 3/16 Lock (6)	20	0706-002	Gage, Ammeter
6		Part of item 23	21	0401-450	Decal, Console Front
7	0209-849	Bolt, 1/4-20 x 5/8 Carr. (4)	22	0230-001	Light, Indicator (4)
8	0209-824	Bolt, 1/4-20 x 3/4 Carriage	23	1807-006	Rivet, Pop 1/8 x 5/8 (2)
9		Grip, Part of Valve Control	24	0230-002	Bulb, Light (4)
10	0209-090	HHCS, 3/8-16 x 3/4 (4)	25	0230-003	Lens, Cover Red (4)
11	0811-066	Harness	26	0215-191	Bushing, Snap
12	1613-014	Panel, Instrument Top	27	1104-023	Knob, 5/16-18 Park brake
13	1401-139	Nut, 3/8-16 Nyloc (4)	28	1401-130	Nut, 1/4 F Top Lock
14	0902-001	Inclinometer			
15	1613-015	Panel, Instrument Front			


DASH PANEL

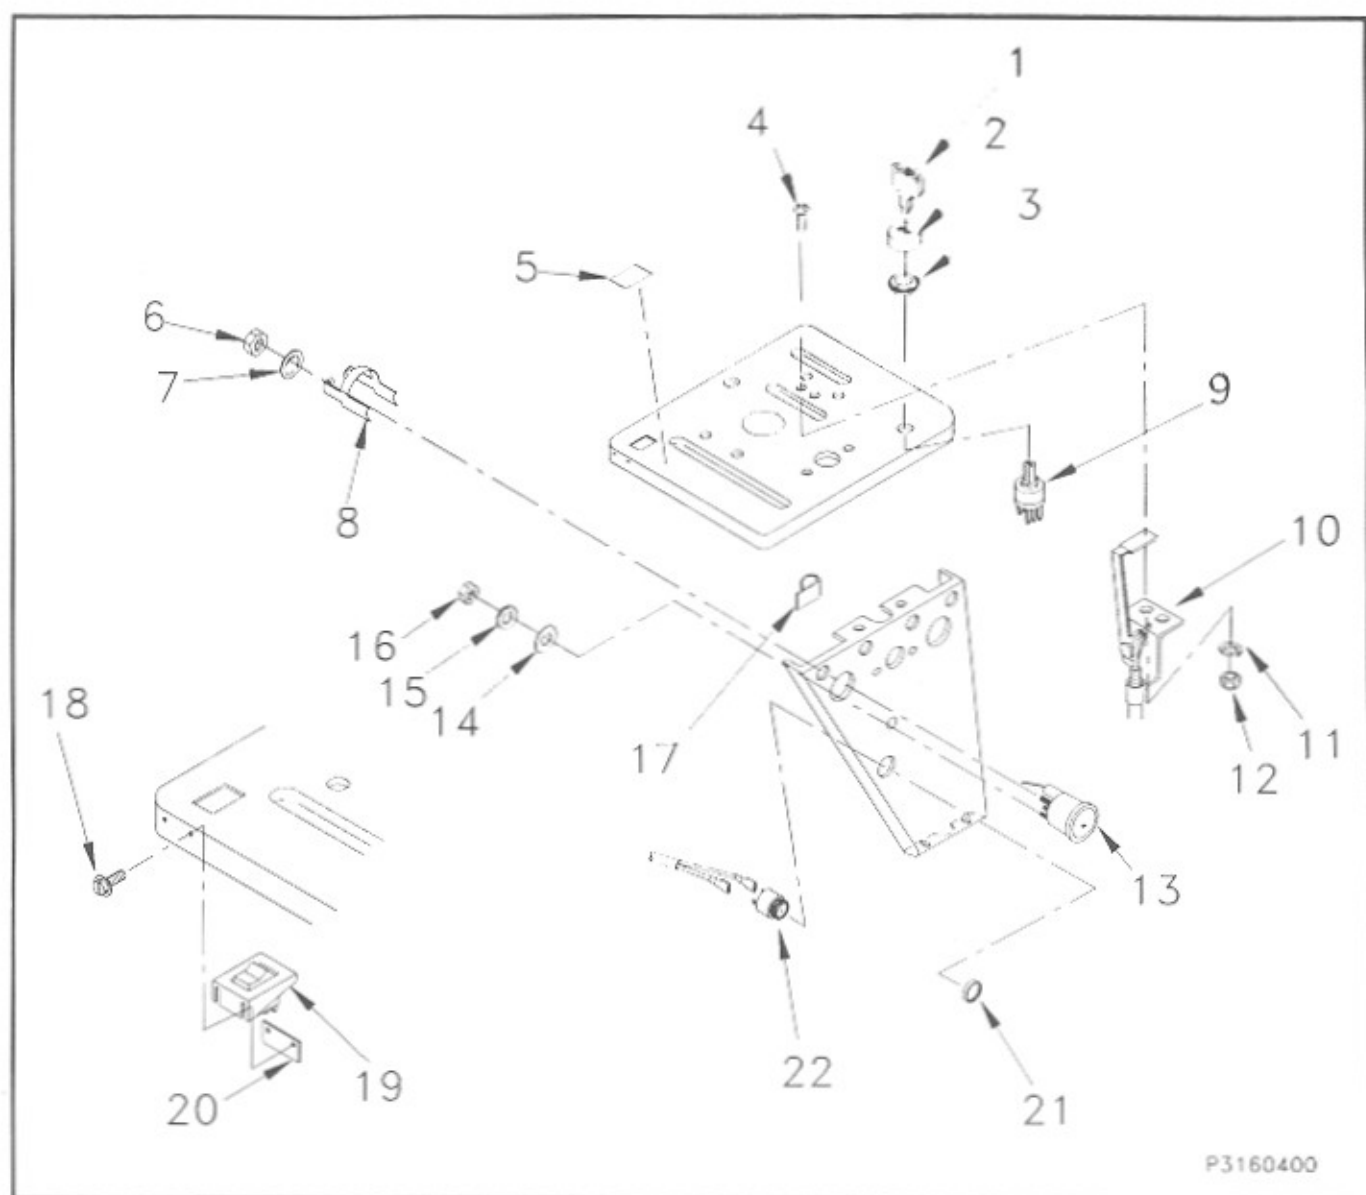

P3160400


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1102-067	Key, Molded	14		Part of item 13
2	1906-027	Shield, Switch	15		Part of item 13
3	1401-147	Nut, Switch	16		Part of item 13
4	0208-002	Screw, 10-24 x 3/4 (2)	17	0307-044	Clip
5	0401-456	Decal, Headlight	18	1901-239	Screw, #10 x 3/8 Slotted (2)
6		Part of item 13	19		Part of Head Light
7		Part of item 13	20	1605-158	Plate, Nut
8		Part of item 13	21		Part of Item 22
9	1923-059	Switch, Ignition	22	0230-005	Indicator, Audio Alarm
10	0301-176	Cable, Throttle			
11	2301-001	Washer, 3/16 Lock (2)			
12	1401-001	Nut, 10-24 Hex (2)			
13	0706-006	Gauge, Temperature			

ENGINE COMPONENTS

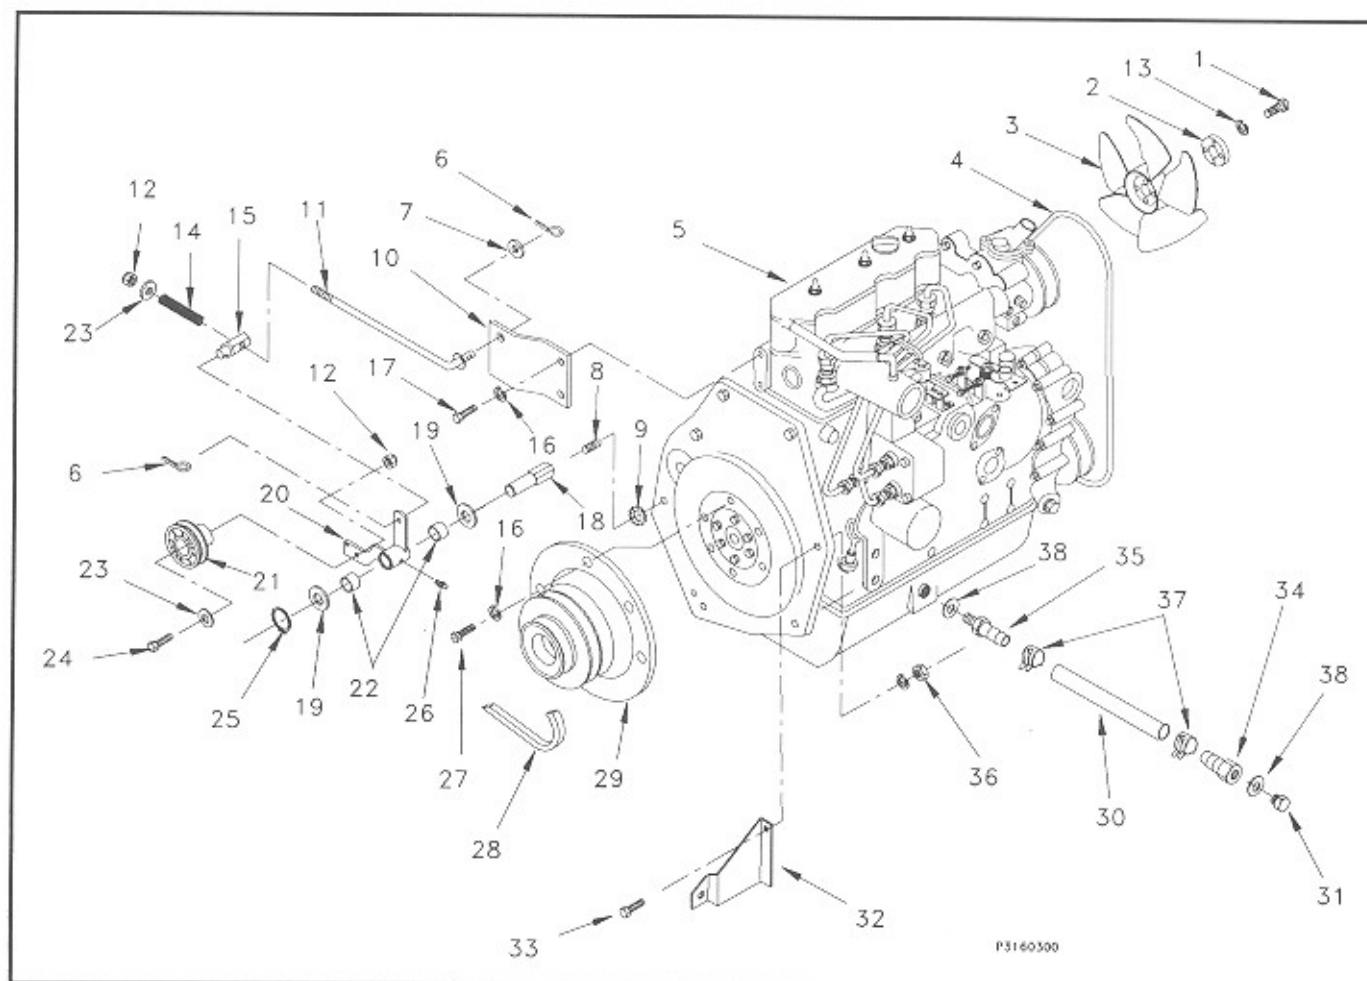


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0209-843	Bolt, 6mm-1.0 x 20mm (4)	21	1608-427	Pulley, Idler 3.5 O.D.
2	1913-329	Spacer, Fan	22	0204-176	Bearing, 1 x 3/4 (2)
3	0612-008	Fan, Engine (Part of Engine)	23	2301-022	Washer, 3/8 Flat (2)
4	0205-553	Belt, Engine Fan (Part of Eng.)	24	0209-337	HHCS, 3/8 C x 1-3/4
5	E-287	Engine, B&S Diesel 26.5 HP	25	1806-154	Ring, 1.0 Dia. Ext. Retaining
6	1604-193	Pin, 1/8 x 3/4 Cotter (2)	26	0603-004	Fitting, Zerk 1/4-20 Straight
7	2301-359	Washer, 3/8 Flat SAE (4)	27	0209-832	Bolt, 8mm-1.28 x 25mm (6)
8	1920-007	Stud, M10-1.25 x 44.5	28	0205-534	Belt, Transmission
9	2301-009	Washer, 1/2 Star	29	1608-428	Pulley, Engine
10	0214-627	Brk't, Rod Anchor	30	0812-128	Hose, 15" Fuel Line
11	1808-358	Weldm't., Extension Rod	31		Part of item 5
12	1401-139	Nut, 3/8 C Nyloc (2)	32	0214-631	Brk't., Belt Guard Top
13	2301-003	Washer, 1/4 Lock (4)	33	0209-108	Bolt, 5/16 x 3/4
14	1916-172	Spring, Belt Tension	34	0603-037	Fitting, Oil Drain Hose
15	0502-033	Swivel, .390 x .375	35	0603-036	Fitting, Oil Pan
16	2301-004	Washer, 5/16 Lock (9)	36	1401-020	Nut, 5/16 C hex
17	0209-842	Bolt, 8mm x 20mm (2)	37	0307-058	Clamp, Oil Line (2)
18	1617-021	Stud, Idler Pivot	38		Part of item 5
19	2301-347	Washer, Mach. Bushing (2)			
20	0102-226	Arm, Trans. Idler			

PTO DRIVE

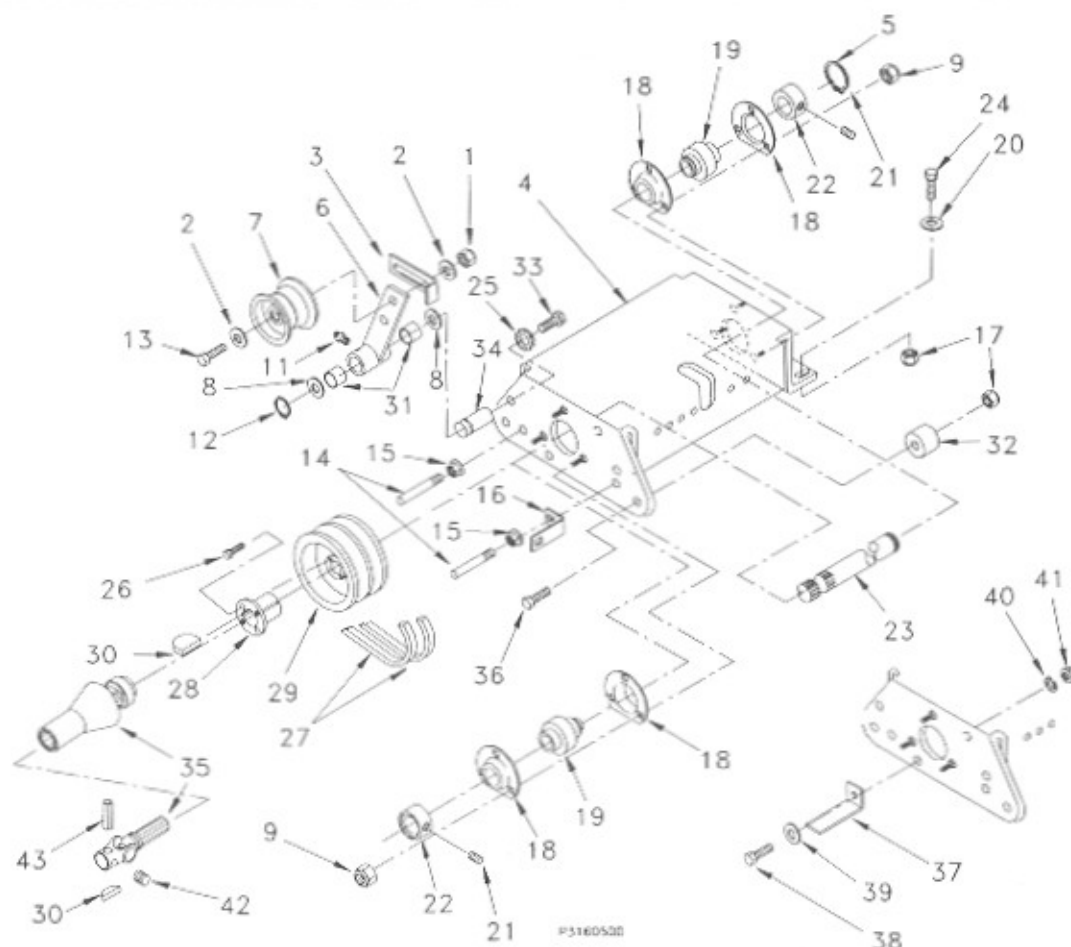

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1401-139	Nut, 3/8 C Hex Nyloc (5)	24	0209-852	HHCS, 1/2 C x 1-1/4 (2)
2	2301-022	Washer, 3/8 Flat (2)	25	2301-009	Washer, 1/2 Star
3	0214-553	Brk't, Belt Guide	26	0209-049	HHCS, 1/4-20 x 1 (2)
4	1302-112	Mount, Engine	27	0205-538	Belt, PTO Set of 2
5	1806-008	Ring, 1" Retaining (2)	28	0215-175	Bushing, 1" I.D.
6	0102-180	Arm, Idler PTO	29	1608-119	Pulley, PTO
7	1608-419	Pulley, Idler	30	1102-051	Key, 1/4 x 7/8 Woodruff (2)
8	2301-347	Washer, Mach. Bushing (2)	31	0204-176	Bearing, (2)
9	1401-141	Nut, 5/16 C Nyloc (6)	32	1913-328	Spacer, Engine Base
10	0209-337	HHCS, 3/8 C x 1-3/4 (4)	33	0209-480	HHCS, 1/2-13 x 1
11	0603-004	Fitting, Zerk Straight	34	1920-006	Stud, Idler Pivot
12	1806-154	Ring, 1"Dia. Ext. Retaining	35	1904-322	Shaft, Quick Connect
13	0209-350	HHCS, 3/8 x 2-1/2	36	0209-864	HHCS, 1/2 C x 2-1/4 (2)
14	1942-005	Stud, Belt Guide (2)	37	0705-059	Guide, Belt
15	1401-232	Nut, 5/16 C Large HSWH (2)	38	0209-114	HHCS, 5/16 C x 1
16	0214-619	Brk't, Belt Guard	39	2301-021	Washer, 5/16 Flat
17	1401-142	Nut, 1/2 C Hex Nyloc (4)	40	2301-004	Washer, 5/16 Lock
18	0603-032	Flangette, 3 Hole (4)	41	1401-020	Nut, 5/16 C Hex
19	0204-180	Bearing (2)	42	1901-017	Screw, Set 3/8C x 3/8
20	2301-025	Washer, 5/8 Flat (2)	43	1604-185	Pin, Roll 5/16 x 2
21		Part of item 19			
22		Part of item 19			
23	1904-321	Shaft, PTO			


PTO DRIVE

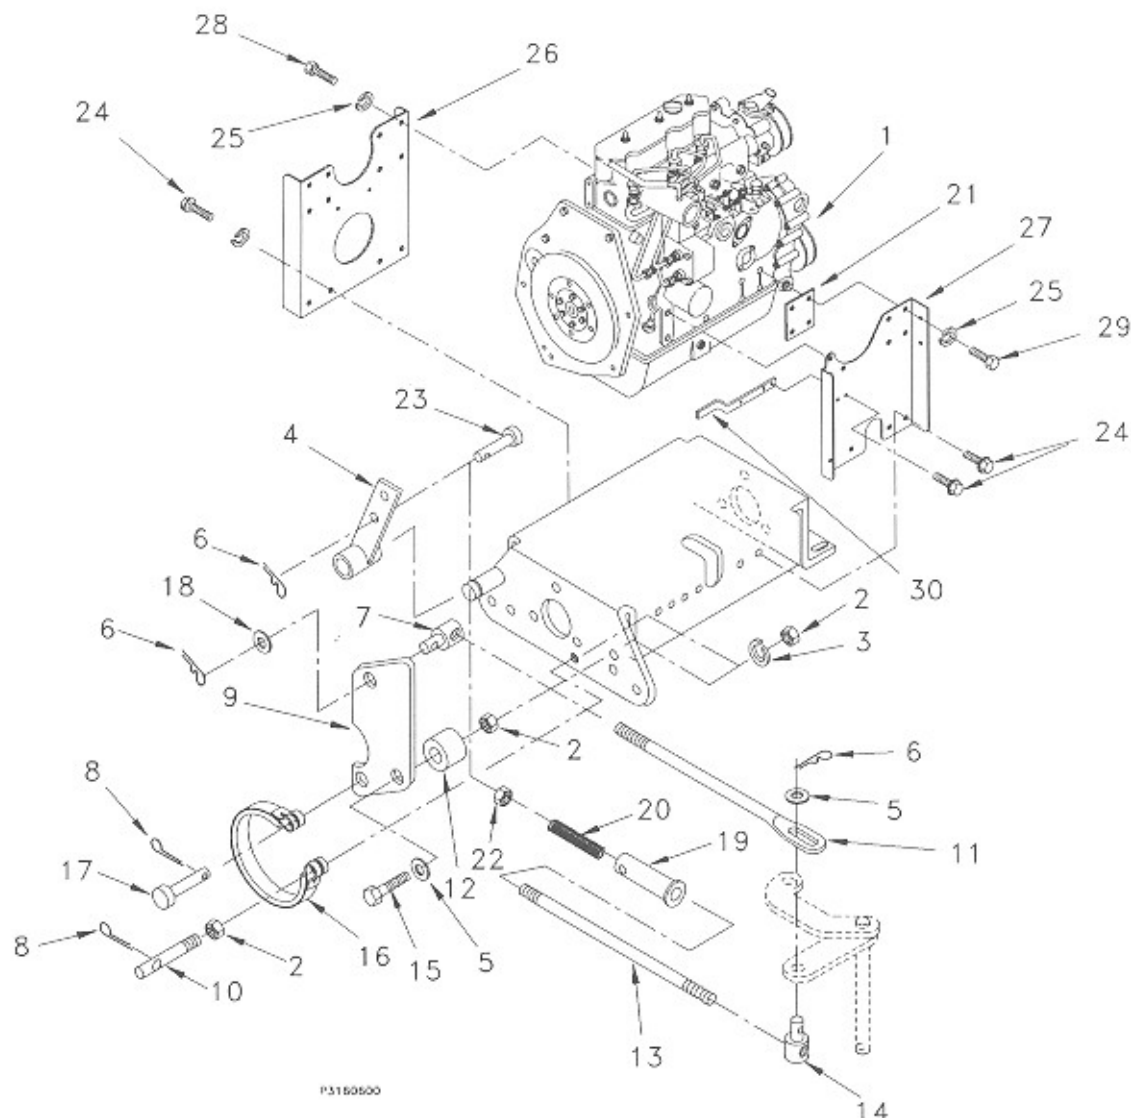

P3160600

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	E287	Engine, B&S Diesel 26.5 HP	17	1604-192	Pin, Clevis 5/8 x 1-1/4
2	1401-030	Nut, 3/8 C Hex (4)	18	2301-359	Washer, 3/8 Flat SAE
3	2301-006	Washer, 3/8 Lock (2)	19	1912-004	Assy. Spring Sleeve
4	0102-180	Arm, Idler PTO	20	1916-205	Spring, PTO
5	2301-022	Washer, 3/8 Flat (2)	21	1605-155	Plate, Spacer
6	0309-030	Clip, Hair Pin (3)	22	1401-139	Nut, 3/8 -16 NC Nyloc
7	0502-031	Rod End, Swivel 3/8 C	23	1604-061	Pin, Clevis 3/8 x 1-1/2
8	1604-193	Pin, Cotter 1/8 x 3/4 (2)	24	0209-084	TFS, 5/16 C x 5/8 (10)
9	0102-225	Arm, Brake	25	2301-004	Washer, 5/16 Lock (15)
10	1604-103	Stud, Brake Band	26	0214-629	Brk't, R.H. Engine Mt.
11	1205-030	Linkage, Brake Blade	27	0214-628	Brk't, L.H. Engine Mt.
12	1913-310	Spacer, 1\" O.D. x .39 I.D.	28	0209-832	Bolt, M8-1.25 x 25 mm (8)
13	1808-361	Rod, PTO Engage	29	0209-842	Bolt, 8M-1.25 x 20 mm (7)
14	0502-030	Rod End, Swivel 3/8 C	30	1942-007	Stud, Belt Guide
15	0209-337	HHCS, 3/8 C x 1-3/4			
16	0217-020	Band, Brake			


STEERING COMPONENTS

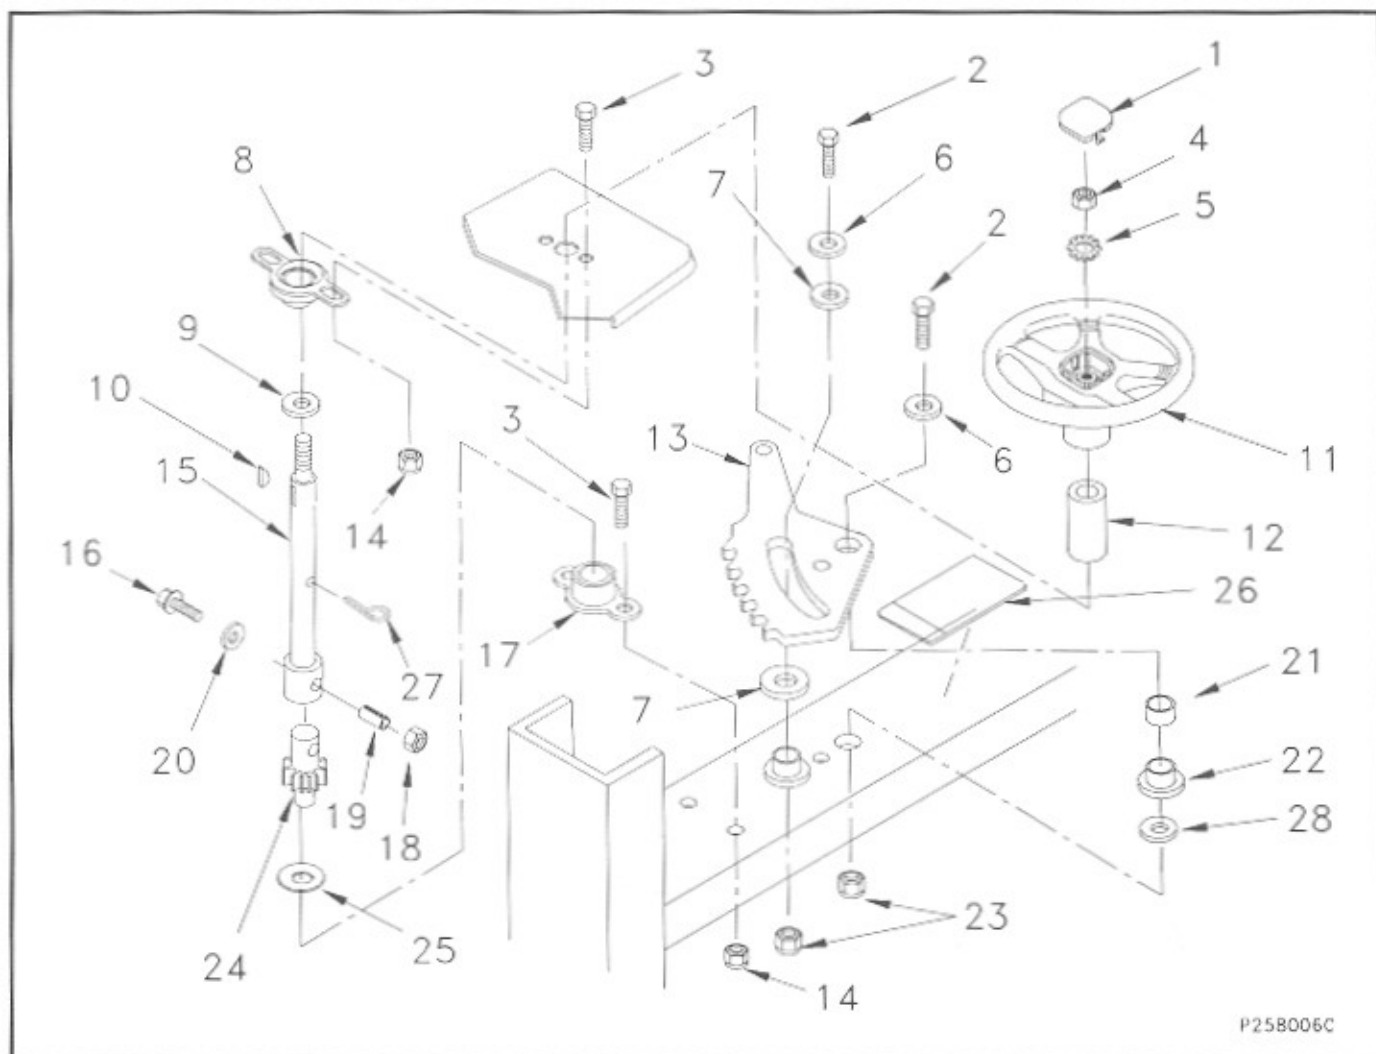

P258006C

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1		Part of item 11	15	1904-311	Shaft, Steering
2	0209-499	HHCS, 1/2 C x 2 (2)	16	0208-011	HHCS, 10-24 x 1-3/4
3	0209-090	HHCS, 3/8 C x 3/4 (4)	17	0204-179	Bearing, Steering Flange
4	1401-070	Nut, 5/8-18 Side Lock Hex	18	1401-099	Nut, 10-24 Hex Center Lock
5	2301-011	Washer, 5/8 Star	19	1604-163	Pin, Roll 8mm x 32mm
6	2301-335	Washer, 1/2 IDx1-3/4 OD (2)	20	2301-296	Washer, 3/16 Flat
7	2301-336	Washer, 1.016 ID x 2 OD (2)	21	1913-287	Spacer, Steering Gear Pivot
8	0204-161	Bearing, Steering Flange	22	0215-181	Bushing, Flanged
9	2301-081	Washer, 3/4 ID x 1-1/4 OD	23	1401-142	Nut, 1/2 C Nyloc (2)
10	1102-013	Key, 3/16 x 3/4 Woodruff	24	0702-150	Gear, Steering Pinion
11	2303-014	Wheel, Steering	25	2301-334	Washer, Mach. Bushing
12	1814-006	Foam, Steering	26	0401-435	Decal, Warning
13	0702-154	Gear, Steering	27	1604-037	Pin, 1/8 x 1-1/4 Cotter
14	1401-139	Nut, 3/8 C Nyloc (4)	28	2301-365	Washer, Flat 1/2 x 1-3/4


ENGINE COMPONENTS RADIATOR

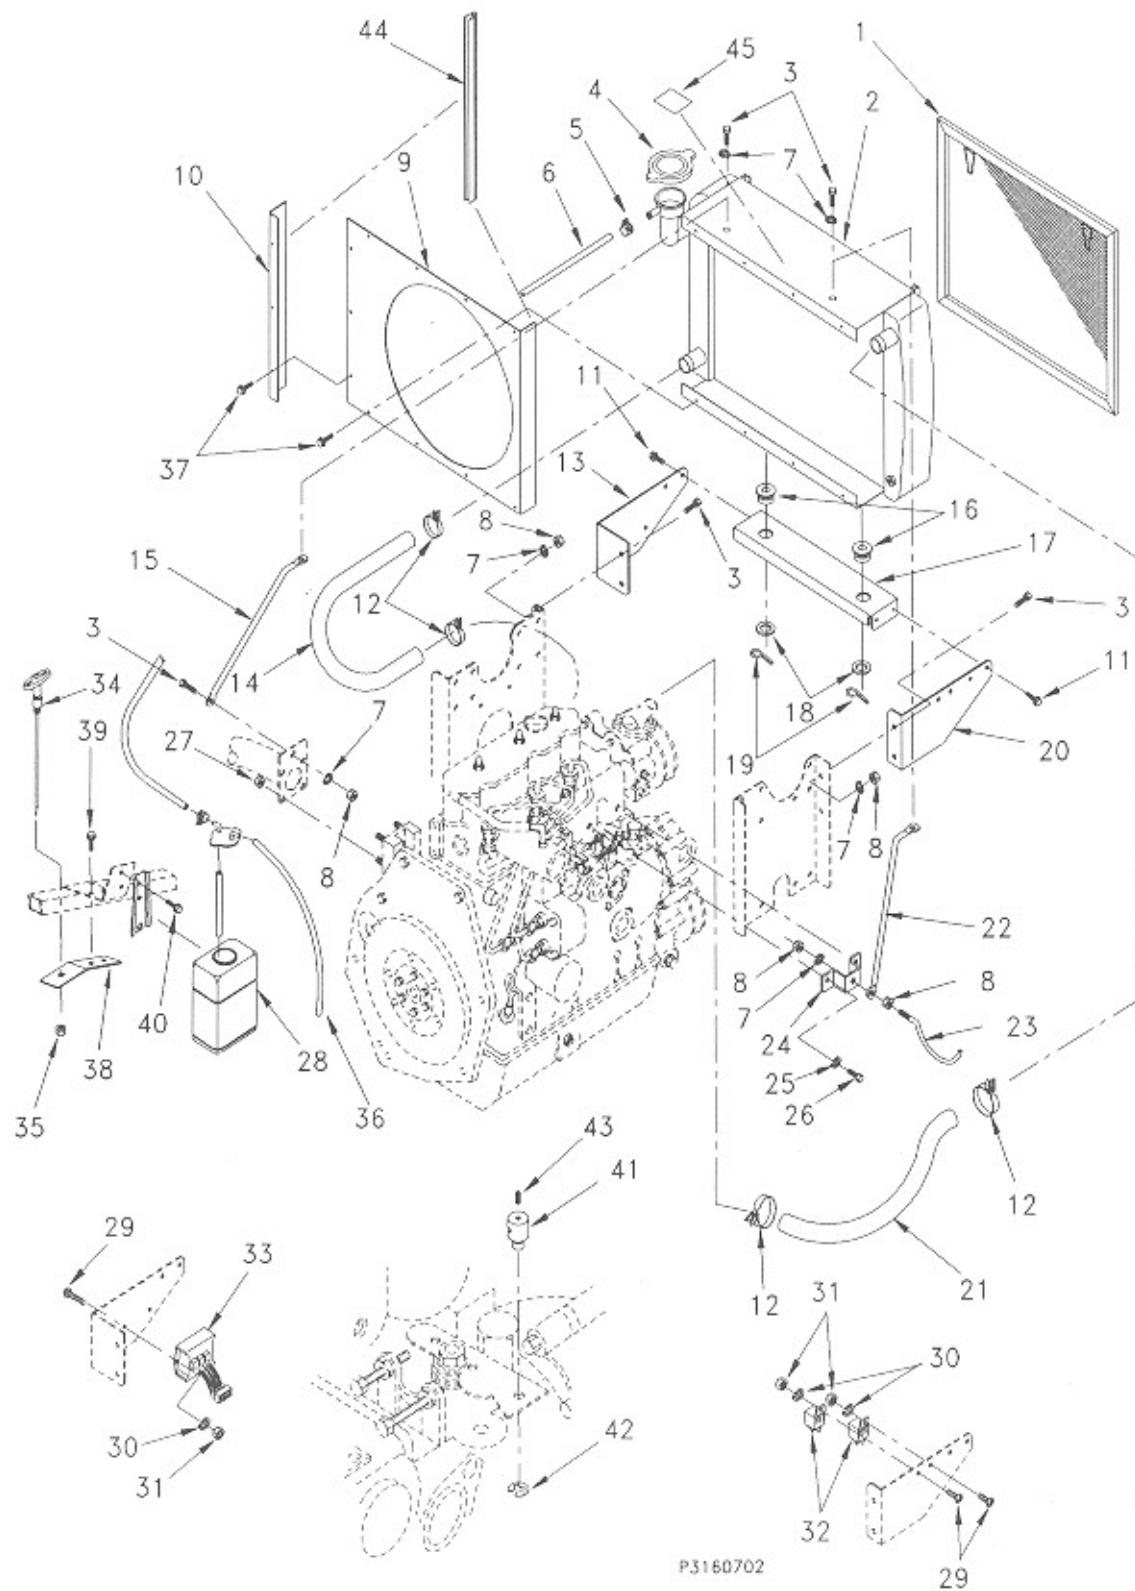

ENGINE COMPONENTS RADIATOR


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1924-013	Screen, Radiator	23	1808-367	Rod, Air Cleaner Support
2	1620-001	Radiator	24	1302-111	Mount, Air Cleaner Rod
3	0209-108	HHCS, 5/16 C x 3/4 (8)	25		Washer, Part of Engine(2)
4	0303-094	Radiator Cap, Part of item 2	26		Bolt, Part of Engine (2)
5	0307-026	Clamp, Hose (2)	27	1401-179	Nut, 8 mm (4)
6	0812-122	Hose, Radiator 12"	28	2001-034	Overflow Tank, Part of Engine
7	2301-004	Washer, 5/16 Lock (4)	29	0208-002	Screw, 10 x 24 x 3/4 (4)
8	1401-020	Nut, 5/16 C Hex (4)	30	2301-001	Washer, 3/16 Lock (4)
9	1701-002	Shroud, Fan	31	1401-001	Nut, 10-24 Hex (4)
10	0214-615	Brk't, Radiator Shroud	32	1923-041	Switch, Relay (2)
11	0209-085	TFS, 1/4-20 x 1/2 (15)	33	1923-062	Module, Interlock
12	0307-059	Clamp, Part of Engine	34	0301-177	Cable, Tow Valve
13	1302-109	Mount, Radiator R.H.	35		Nut, Part of Item 34
14	0812-131	Hose Bot. Radiator P/O Eng.	36	2005-087	Tubing, Overflow
15	1808-363	Rod, R.H. Radiator	37	1901-224	Screw, #10 x 1/2 Slotted (9)
16	1811-037	Grommet, Rubber (2)	38	0214-634	Brk't, Tow Valve Cable
17	1921-051	Support, Radiator	39	1901-239	Screw, #10 x 3/8 Slotted(2)
18	2301-008	Washer, 1/2 Flat (2)	40	0209-084	TFS, 5/16 C x 5/8 (2)
19	1604-037	Pin, 1/8 x 1-1/4 Cotter (2)	41	1617-020	Pivot, Throttle Wire
20	1302-110	Mount, Radiator L.H.	42	1806-159	E - Ring, .25 External
21	0812-124	Hose, Top Radiator	43	1901-110	Screw, 8-32 x .25 Allen HD Set.
22	1808-364	Rod, L.H. Radiator	44	2301-004	Trim, Fan Shroud (2)
			45	0401-393	Decal, Radiator Screen

FUEL SYSTEM

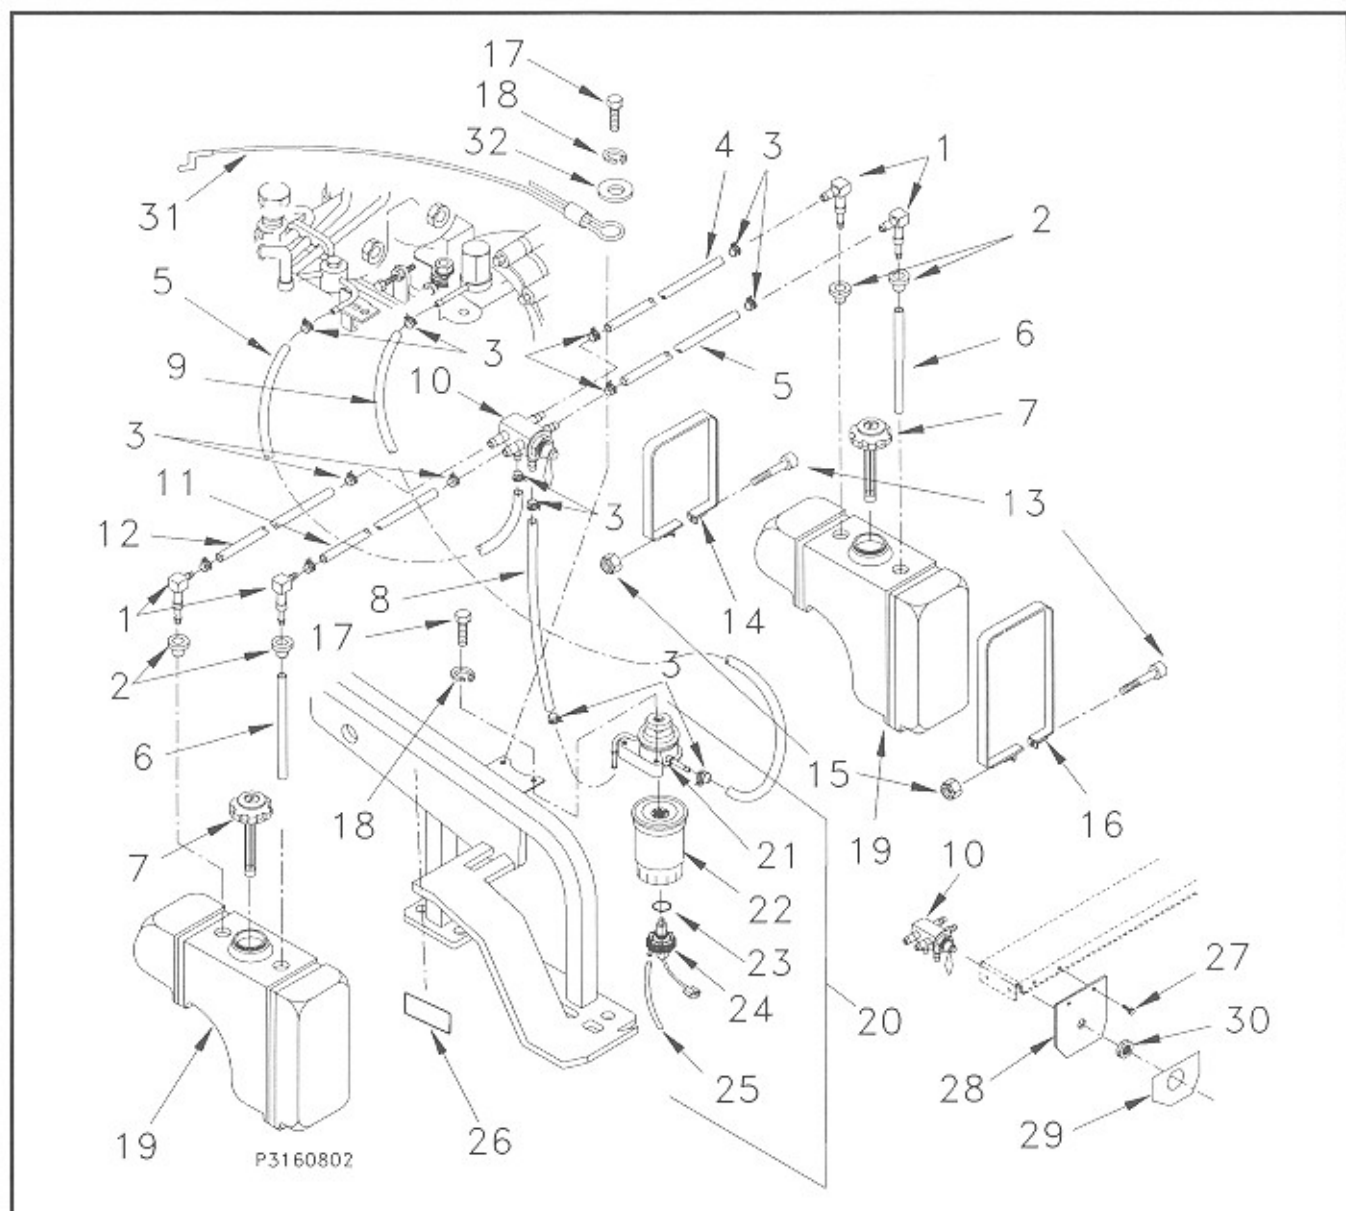

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0101-161	Fitting, Tank (4)	17	0209-842	Bolt, M8-1.25 x 20 mm (2)
2	0215-179	Fitting, Tank Bushing (4)	18	2301-004	Washer, 5/16 Lock (2)
3	0307-026	Clamp, Hose (14)	19	2001-033	Fuel, Tank (2)
4	0812-127	Hose, Fuel Line 25"	20	0610-024	Fuel Filter Assembly
5	0812-119	Hose, Fuel Line 26" (2)	21	0610-026	Fuel Filter Priming Pump
6	2018-007	Tube, Fuel Intake (2)	22	0610-025	Fuel Filter Element
7	0303-093	Cap, Fuel Tank W/Gage(2)	23		Part of Item 21
8	0812-117	Hose, Fuel Line 20"	24	0610-027	Filer, Drain Plug
9	0812-121	Hose, Fuel Line 12"	25		Part of Item 20
10	2201-039	Valve, Fuel	26	0401-373	Decal, Diesel Fuel (2)
11	0812-112	Hose, Fuel Line 15"	27	0209-085	TFS, 1/4 C x 1/2 (2)
12	0812-118	Hose, Fuel Line 17"	28	0214-622	Brk't, Fuel Valve
13	0209-097	Bolt, 1/4-20 x 2 SHCS (4)	29	0401-453	Decal, Fuel Indicator
14	1918-031	Strap, Tank Short (2)	30		Nut, Part of Item 10
15	1401-133	Nut , 1/4-20 Nyloc (4)	31	0301-178	Cable, Teather
16	1918-032	Strap, Tank Long (2)	32	2301-020	Washer, 1/4 Flat


EXHAUST SYSTEM

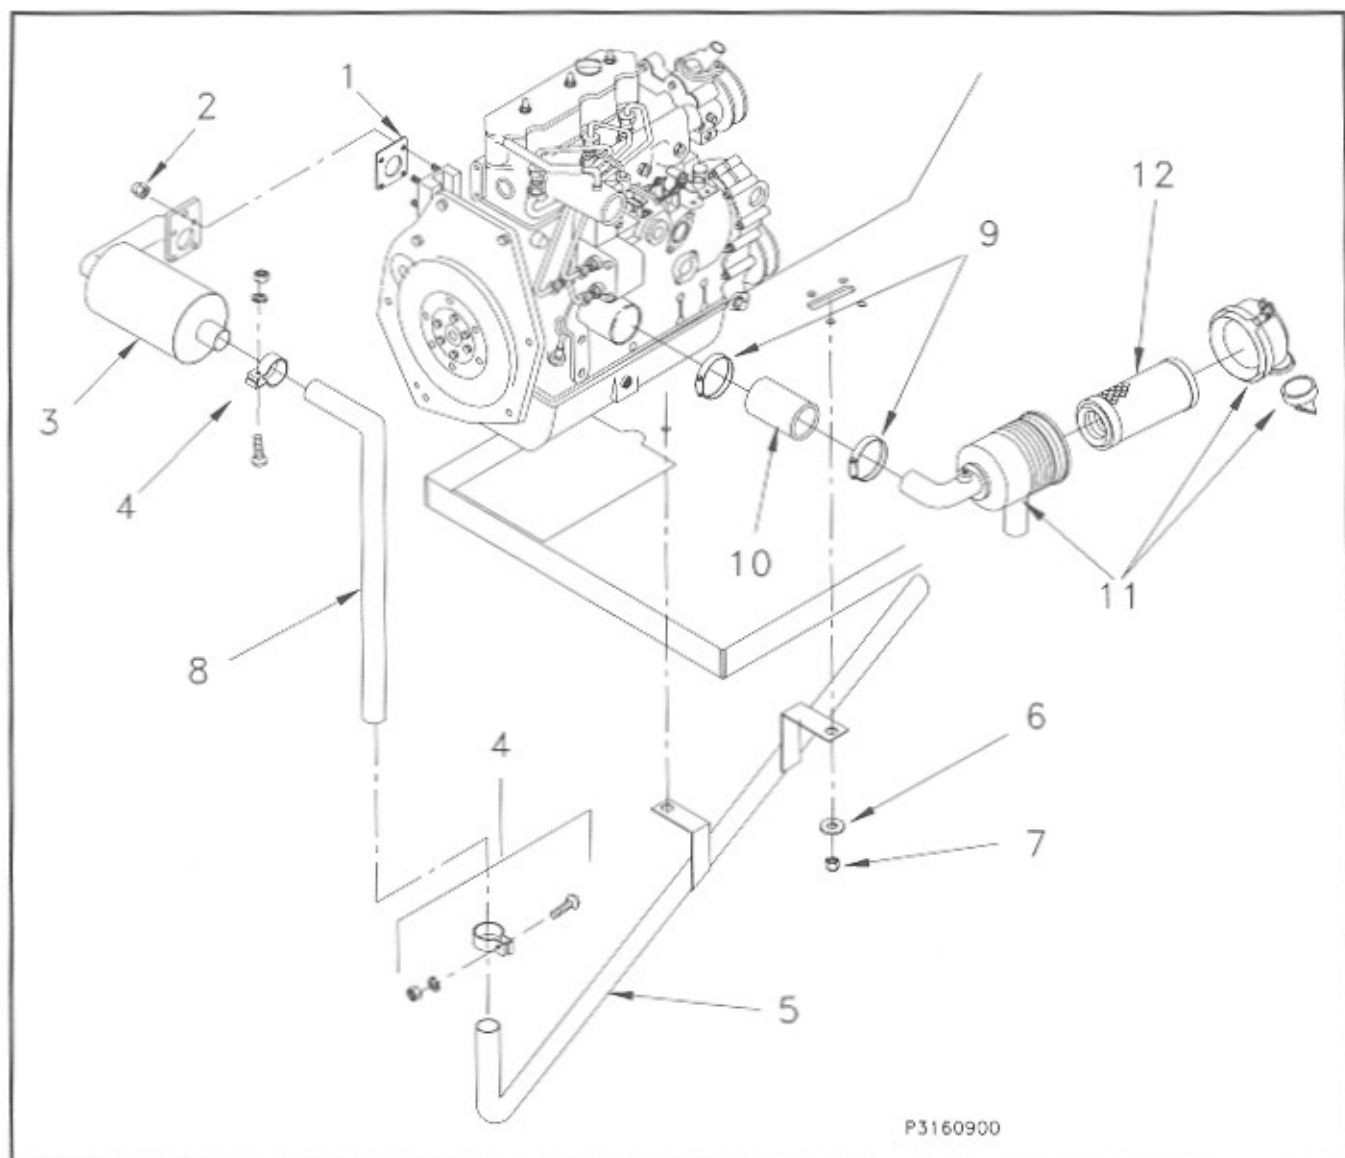

P3160900

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1		Gasket, Muffler P/O Eng.	7	1401-141	Nut, 5/16 C Nyloc
2	1401-179	Nut, 8 mm	8	1615-019	Pipe, Muffler
4		Clamp, Muffler P/O Muffler	9	0307-057	Clamp, Air Filter Hose (2)
3	1304-030	Muffler,	10	0812-116	Hose, Air Filter
5	1615-018	Pipe, Tail Assembly	11	0610-022	Filter, Air Cleaner
6	2301-021	Washer, 5/16 Flat	12	0610-023	Filter, Elem. Cleaner


BLADE CONTROL LEVER

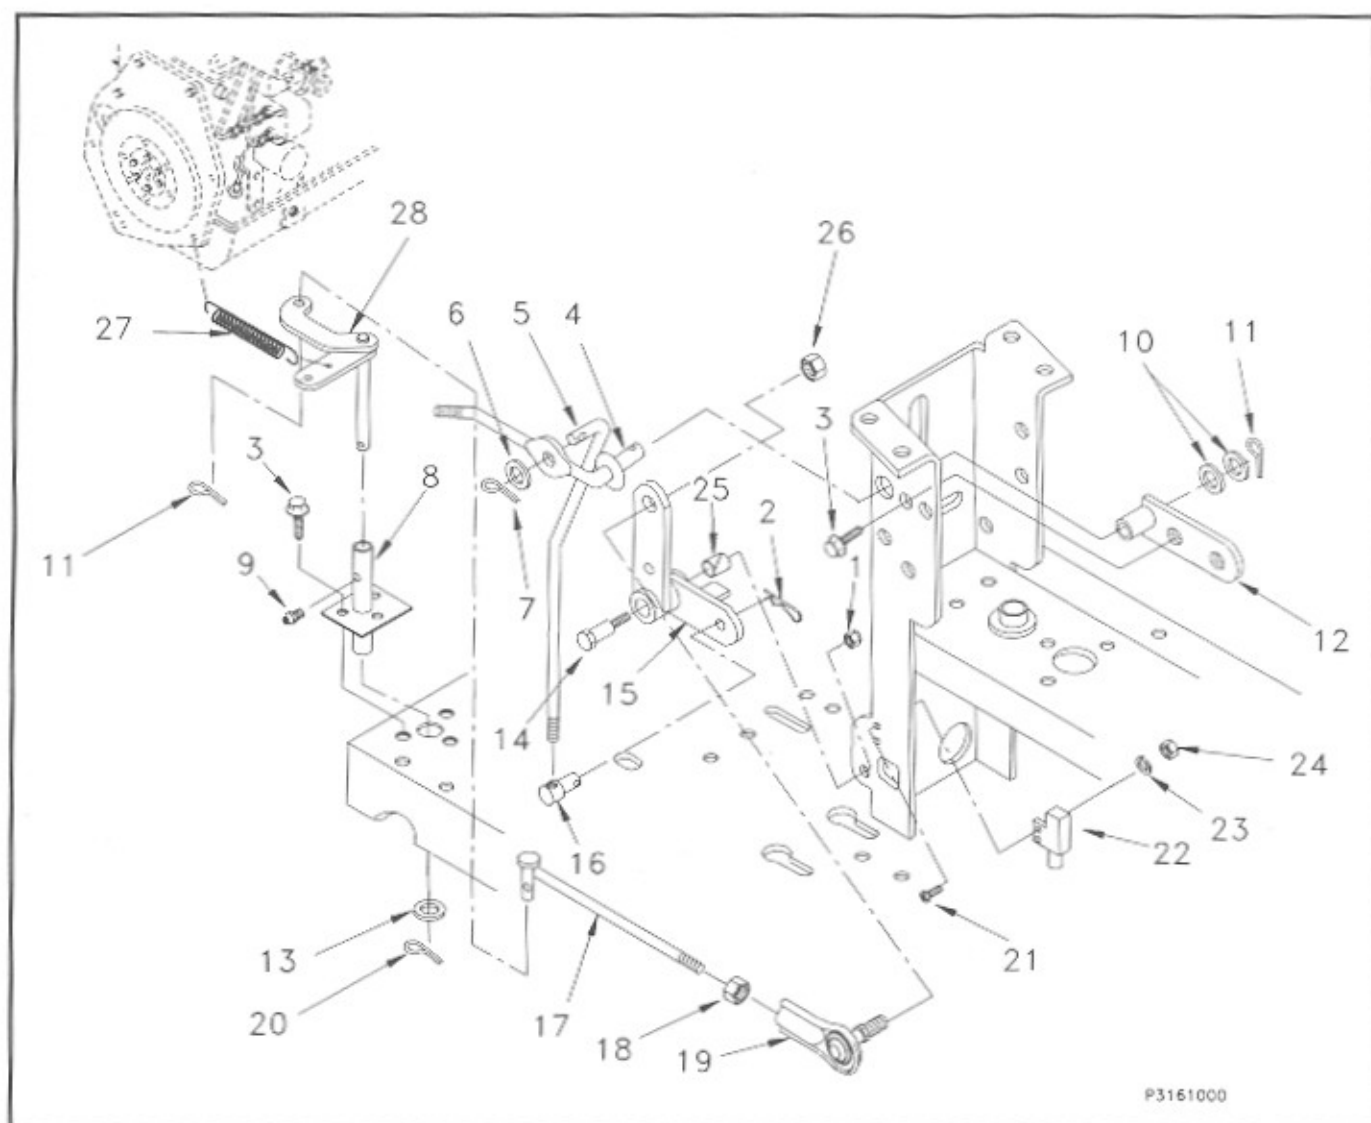

P3161000

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1401-033	Nut, 3/8-24 Hex Ctr. Lock	16	0502-029	Rod End, Swivel, 5/16-18
2	0309-030	Hairpin	17	1808-372	Rod, PTO Engage
3	0209-080	HWST, 5/16-18 x 3/4 (5)	18	1401-050	Nut, 1/2-20 Hex
4	1201-116	Lever, Blade Control	19	0502-026	End Rod, 1/2-20 NF RH
5	1205-026	Linkage, Blade Control	20	1604-037	Pin, 1/8 x 1-1/4
6	2301-052	Washer, 5/16 SAE Flat	21	0208-002	Screw, 10-24 x3/4 (2)
7	1604-193	Pin, 1/8 x 3/4 Cotter (3)	22	1923-061	Switch, PTO
8	1201-128	Counter Lever	23	2301-001	Washer, 3/16 Lock (2)
9	0603-004	Fitting, Grease	24	1401-001	Nut, 10-24 Hex (2)
10	2301-025	Washer, 1/2 Flat SAE (2)	25	0204-183	Bearing, Nylon
11	1604-002	Pin, 3/32 x 1 Cotter (2)	26	1401-237	Nut, 1/2-20 Hex Nyloc
12	1617-015	Pivot, Blade Lever	27	1916-142	Spring
13	2301-344	Washer, 5/8 Flat	28	0102-227	Arm, PTO Bellcrank
14	0209-083	Bolt, 1/2" Dia. Shoulder			
15	0102-222	Arm, Blade Bellcrank			


OPERATOR SEAT

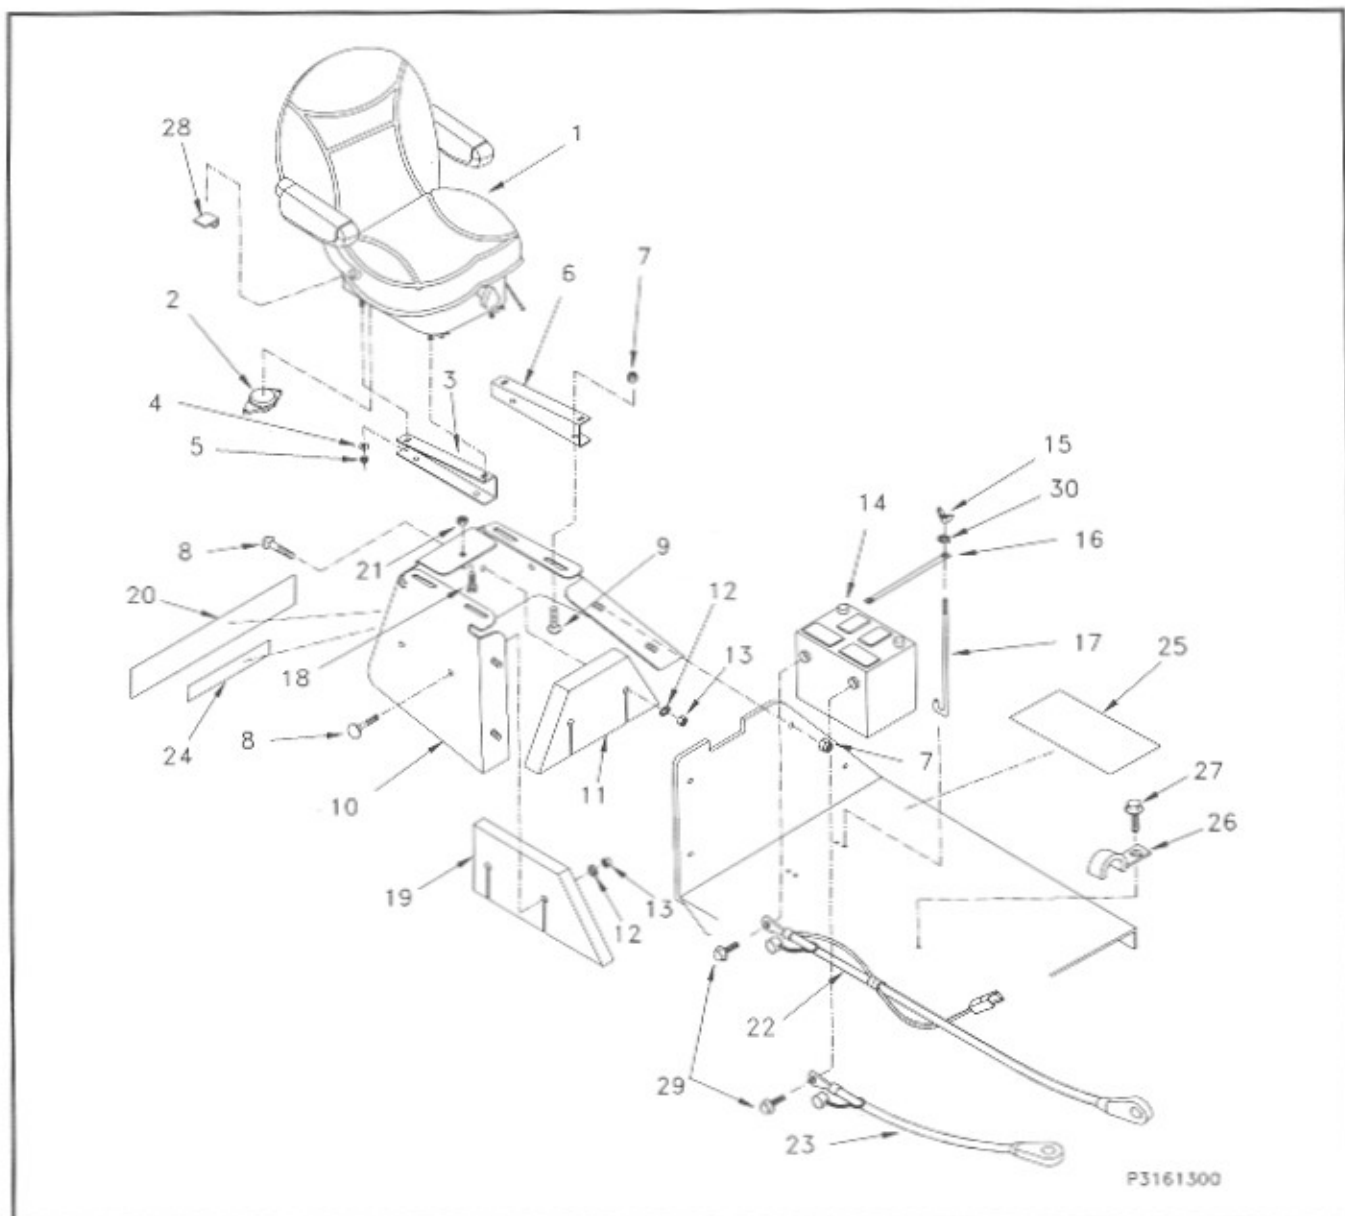

P3161300


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1903-029	Seat, Tractor With Arms	16	1808-340	Rod, Battery Hold Down
2	1923-060	Switch, Seat	17	1808-339	Rod, Battery Tie Down (2)
3	0214-625	Brk't., Seat RH	18	0209-848	HHCS, 1/2-13 x 1-1/4
4	2301-021	Washer, 5/16 Flat (4)	19	2304-015	Weight, Side 52 Lbs.(2)
5	1401-141	Nut, 5/16-18 Nyloc (4)	20	0401-433	Decal, YAZOO
6	0214-626	brk't., Seat LH	21	1401-150	Nut, 1/2-13 Jam hex
7	1401-142	Nut, 1/2-13 Hex Nyloc (8)	22	0301-165	Cable, Pos. Battery
8	0211-012	Bolt, 5/8-18 x 3 Carriage (6)	23	0301-166	Cable, Neg. Battery
9	0211-017	Bolt, 1/2-13 x 1 Carr.(4)	24	0401-118	Decal, Made In U.S.A.
10	0704-383	Guard, Rear Wheel	25	1601-004	Pad, Foot 6 x 12
11	2304-014	Weight, Rear 58 Lbs.	26	0307-052	Clamp, Half Clip
12	2301-010	Washer, 5/8 Lock (6)	27	0209-080	HWST, 5/16-18 x 3/4
13	1401-238	Nut, 5/8-11 Hex (6)	28	0307-044	Clip, Stick-on
14		Battery 12 Volt (Not supplied)	29	0209-867	Bolt, 3/8-16 x 3/8 (2)
15	1401-203	Wing Nut, 5/16-18 (2)	30	2301-004	Washer, 5/16 Lock SAE (2)

TRANSMISSION DRIVE SYSTEM

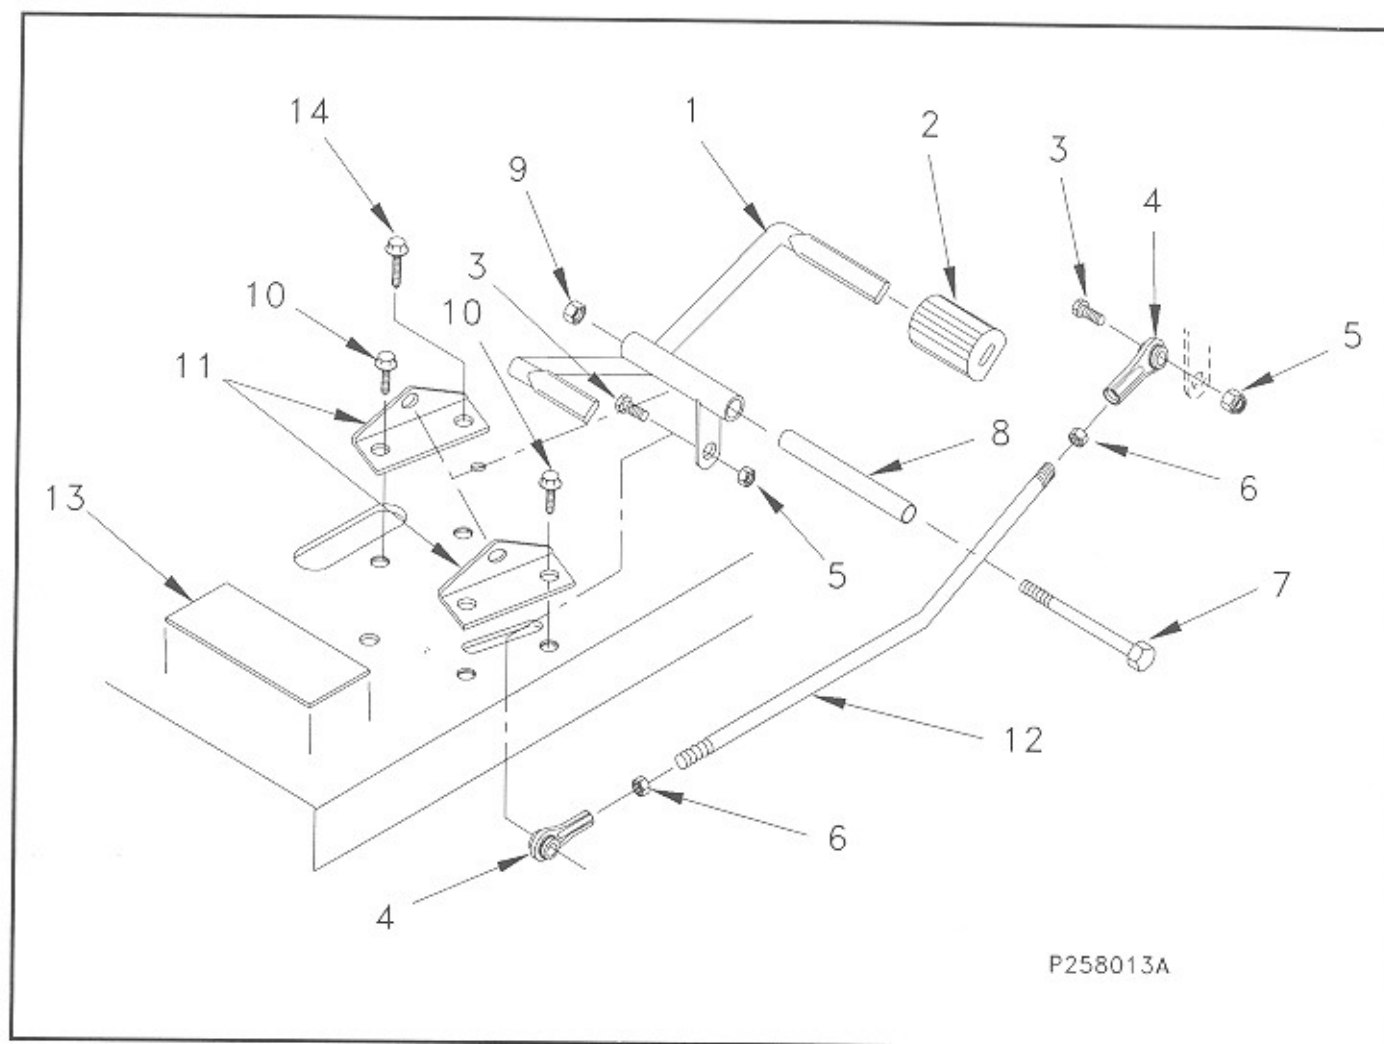

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1602-026	Transmission Pedal	8	2005-076	Tube, Pivot
2	1601-022	Pad, 5-1/4 Foot Pedal	9	1401-133	Nut, 1/4-20 Nyloc
3	0209-091	HHCS, 3/8-16 x 1-1/4 (2)	10	0209-080	HWST, 5/16-18 x 3/4 (3)
4	0502-028	End Rod, 3/8-24 (2)	11	0214-576	Brk't, Trans. Pedal Mount (2)
5	1401-139	Nut, 3/8-16 Nyloc (2)	12	1205-024	Linkage, Transmission
6	1401-032	Nut, 3/8-24 Hex (2)	13	1601-021	Pad, Foot 4-3/4 x 6
7	0209-850	HHCS, 1/4 C x 5-1/2	14	0209-088	HWST, 5/16 C x 1


TRANSMISSION DRIVE SYSTEM

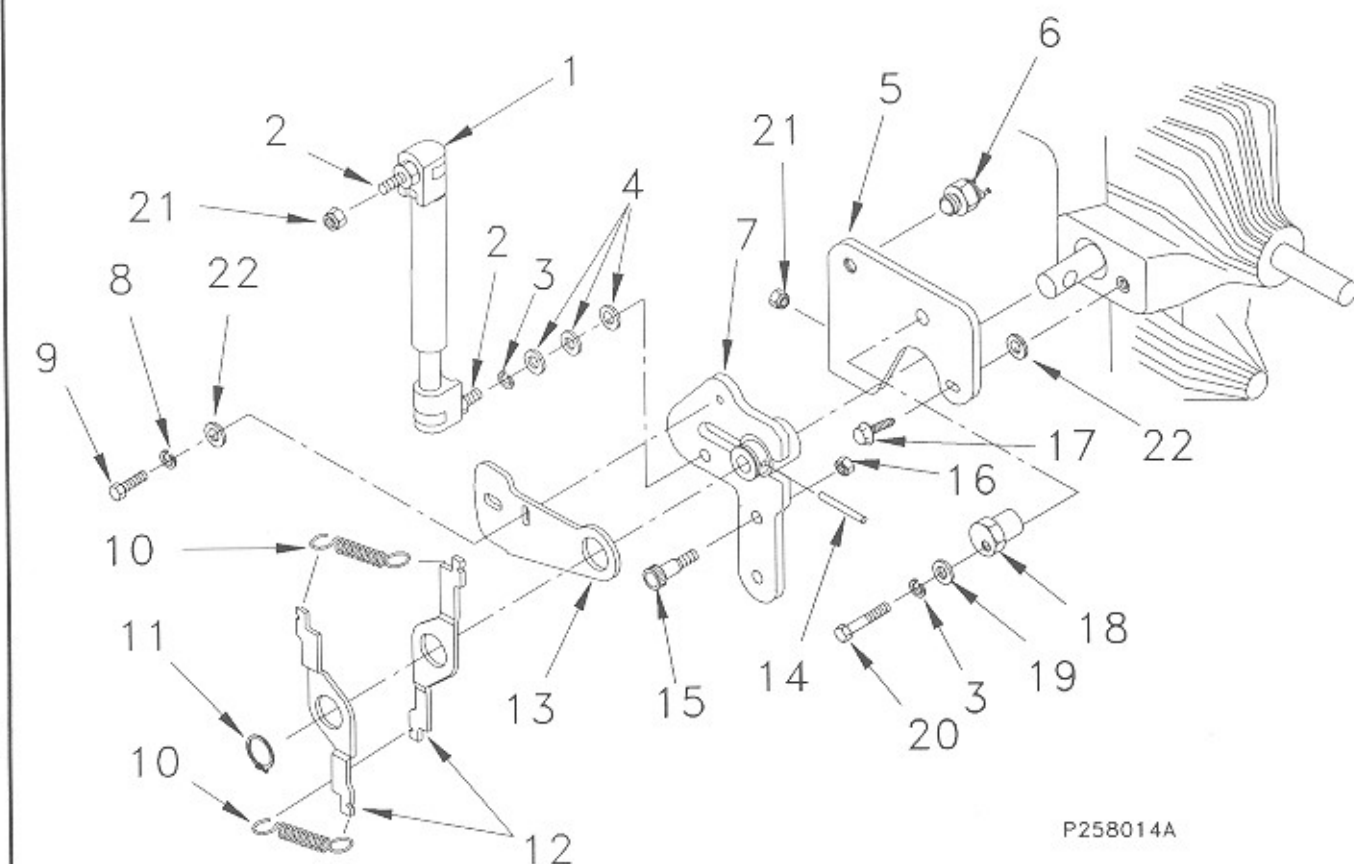

P258014A

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0319-012	Cylinder, Trans. Damping	11	1806-008	Ring, 1" Heavy Duty
2	1942-004	Stud, 10mm Ball (2)	12	0214-574	Brk't, Neutral Return (2)
3	2301-004	Washer, 5/16 Lock (2)	13	0214-572	Brk't, Trans. Switch
4	2301-021	Washer, 5/16 Flat (3)	14	1604-160	Pin, Poll 6mm x 36mm
5	0214-569	Weldment, Trans. Neutral Mt.	15	0209-099	Screw, 3/8 x 1-1/8 Shoulder
6	1923-015	Switch, Ball	16	1401-031	Nut, 3/8-16 Center Lock
7	1201-120	Weldm't, Arm Trans. Control	17	0209-085	TFS, 1/4-20 x 1/2
8	2301-003	Washer, 1/4 Lock	18	0807-049	Hub, Neutral Cam
9	0209-854	HHCS, 1/4-28 x 3/8	19	2301-052	Washer, 5/16 Flat SAE
10	1916-056	Spring, Trans. Neutral (2)	20	0209-857	HHCS, 5/16-24 x 2
			21	1401-141	Nut, 5/16-18 Nyloc (2)
			22	2301-358	Washer, 1/4 Flat SAE (2)

AXLE ASSEMBLY

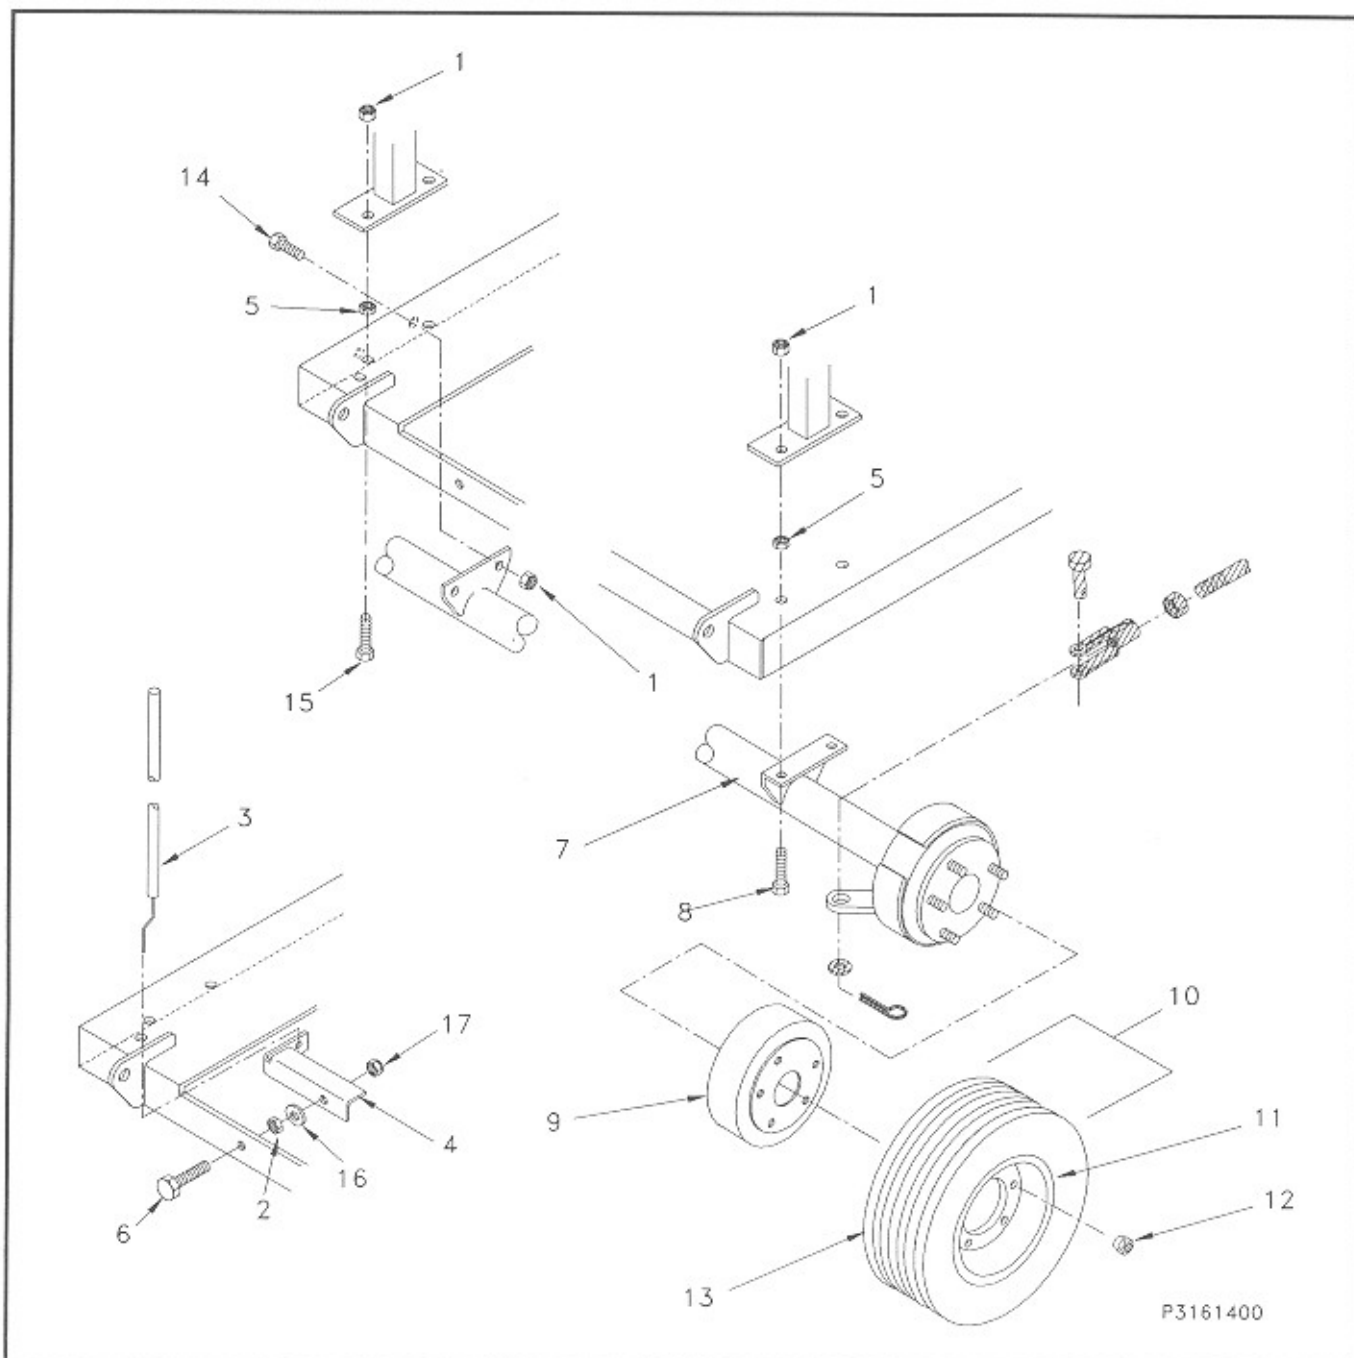


P3161400

ITEM	PART NO.	DESCRIPTION
1	1401-142	Nut, 1/2-13 Hex Nyloc (4)
2	1401-009	Nut, 1/4-20 Hex Ctr. Lock
3	0301-177	Cable, Tow Valve
4	0102-149	Arm, Bypass Valve
5	1401-150	Nut, 1/2-13 Jam Hex (4)
6	0209-049	Bolt, 1/4-20 x 1
7	2006-092	Transaxle, Assembly
8	0209-853	HHCS, 1/2 C x 1-3/4 (2)

ITEM	PART NO.	DESCRIPTION
9	0217-018	Housing, Brake (2)
10	2305-134	Wheel, Assembly (2)
11	1805-026	Rim, Beaded Front (2)
12	1401-061	Nut, 7/16 C Lug (10)
13	2003-078	Tire, 20 x 10.00 - 8 (2)
14	0209-848	HHCS, 1/2 C x 1-1/4 (2)
15	0209-852	HHCS, 1/2 C x 1-1/2 (2)
16	2301-052	Washer, 5/16 Flat
17	1401-133	Nut, 1/4 C Nyloc


BRAKE PEDAL LINKAGES

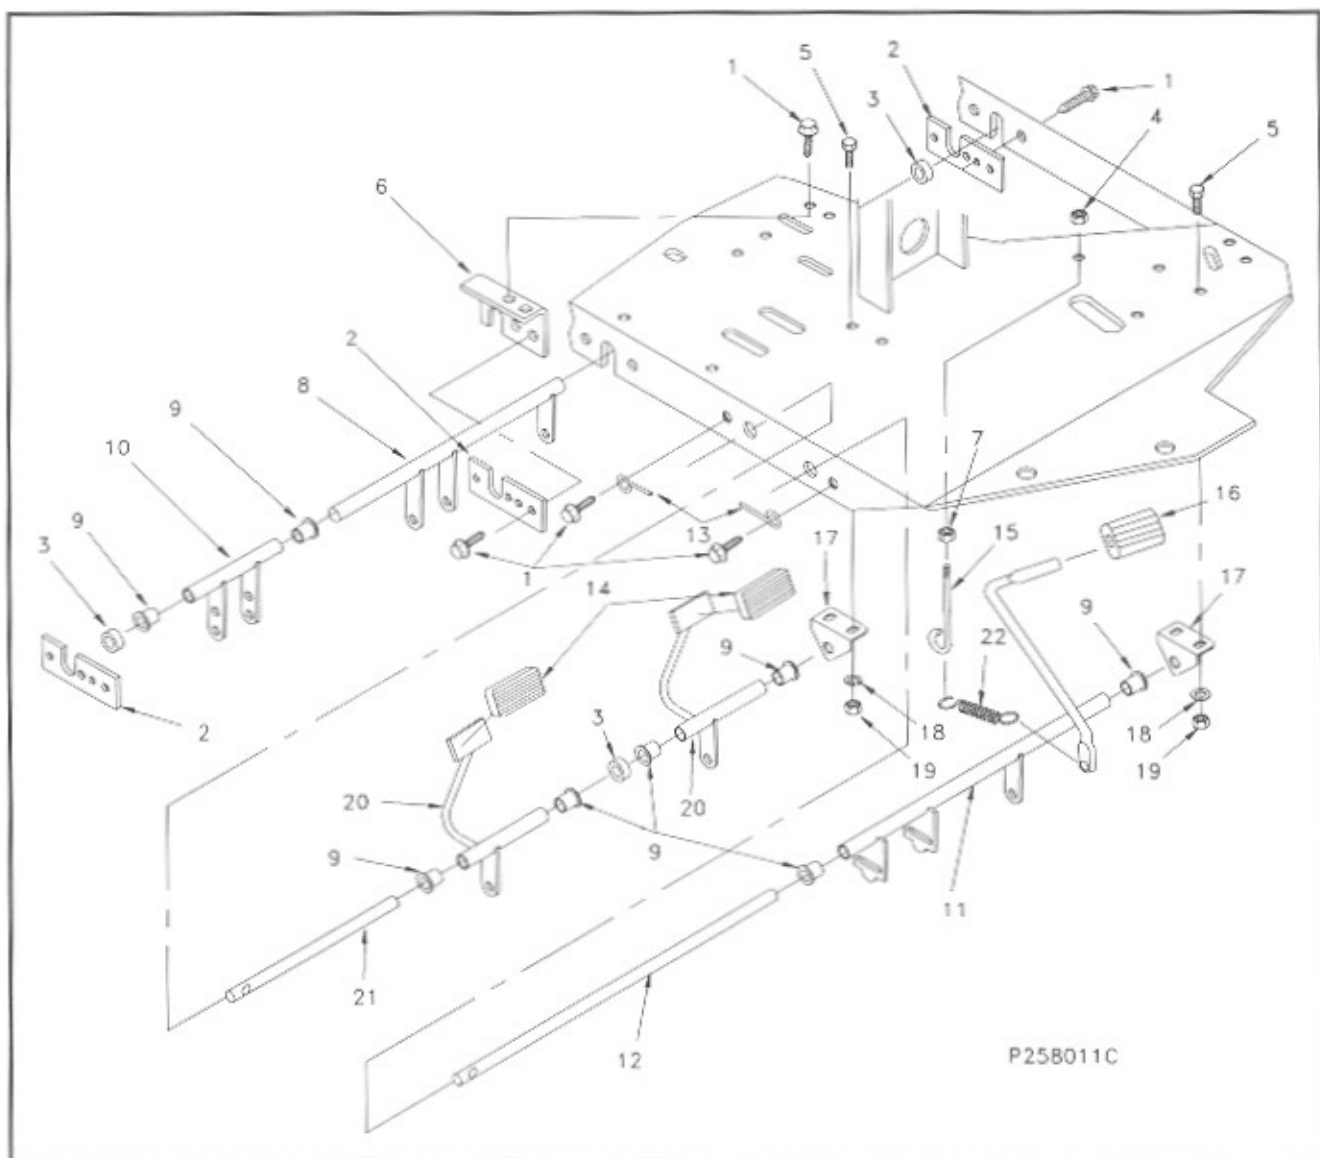

P258011C

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0209-080	TFS, 5/16-18 x 3/4 (10)	13	1604-175	Pin, Loop (2)
2	0214-551	Brk't, Brake Mount (3)	14	1601-024	Pad, Brake Pedal (2)
3	1913-307	Spacer, 1"OD x 5/8"ID (3)	15	0212-036	Bolt, Eye 1/4-20 x 3
4	1401-133	Nut, 1/4 -20 Nyloc	16	1601-022	Pad, 5-1/4 Foot Pedal
5	0209-020	HHCS, 5/16-18 x 7/8 (4)	17	0214-578	Brk't, Park Brake Pedal (2)
6	1302-081	Mount, Brake Engage	18	2301-052	Washer, 5/16 Flat SAE (4)
7	1401-010	Nut, 1/4 C Hex	19	1401-141	Nut, 5/16-18 Nyloc (4)
8	0217-031	Weldm't, Brake Counter Shaft	20	1602-033	Weldm't, Brake Pedal (2)
9	0204-173	Bushing, 5/8 Garlock (8)	21	1904-314	Shaft, Brake Pivot
10	1617-016	Pivot, Blade Linkage	22	1916-204	Spring, Extension
11	1602-027	Weldm't, Park Brake Pedal			
12	1904-308	Shaft, Park brake Pivot			

BRAKE PEDAL LINKAGES

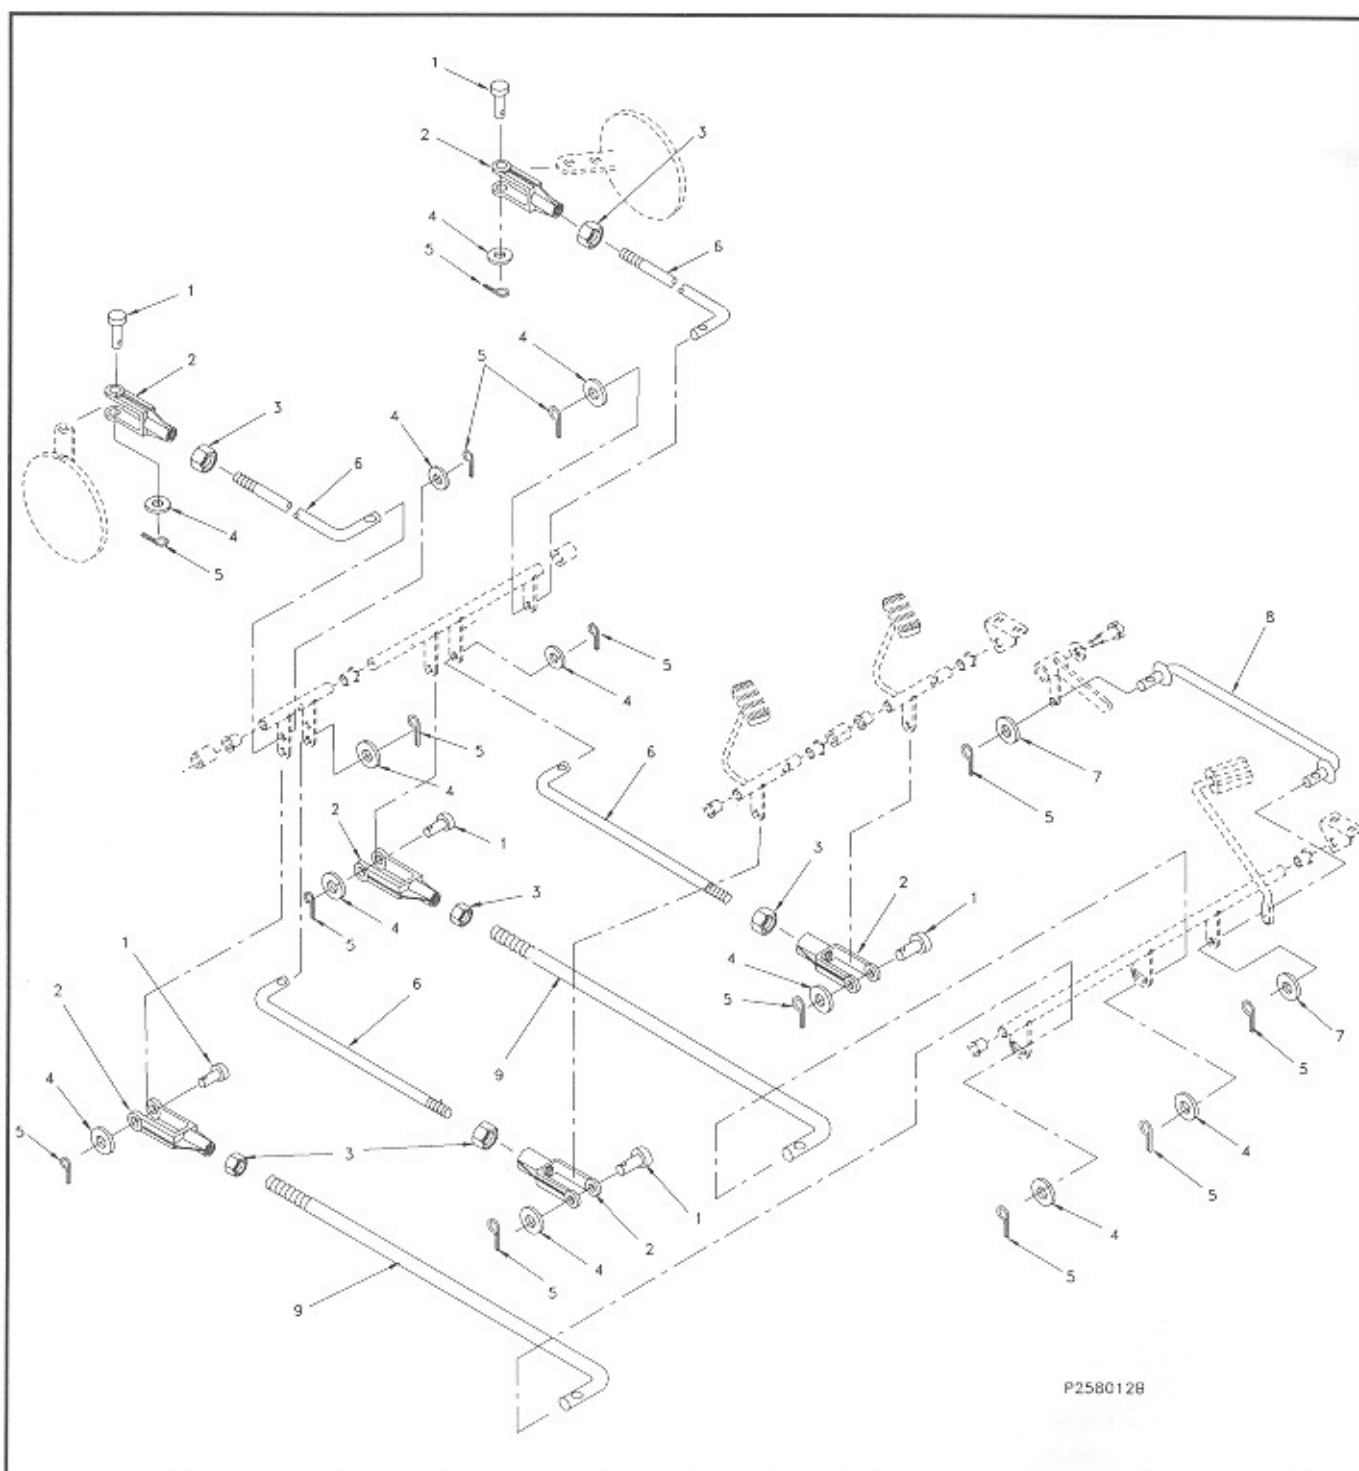


P2580128

ITEM	PART NO.	DESCRIPTION
1	1604-013	Pin, 5/16 x 1 Clevis (6)
2	2501-027	Yoke, 5/16-18 Rod (6)
3	1401-020	Nut, 5/16 C Hex (6)
4	2301-021	Washer, 5/16 Flat (12)

ITEM	PART NO.	DESCRIPTION
5	1604-193	Pin, 1/8 x 3/4 Cotter (14)
6	1808-200	linkage, Brake (4)
7	2301-022	Washer, 3/8 Flat (2)
8	1808-336	Rod, Brake Connect
9	1808-287	Linkage, brake (2)


PARK BRAKE RELEASE

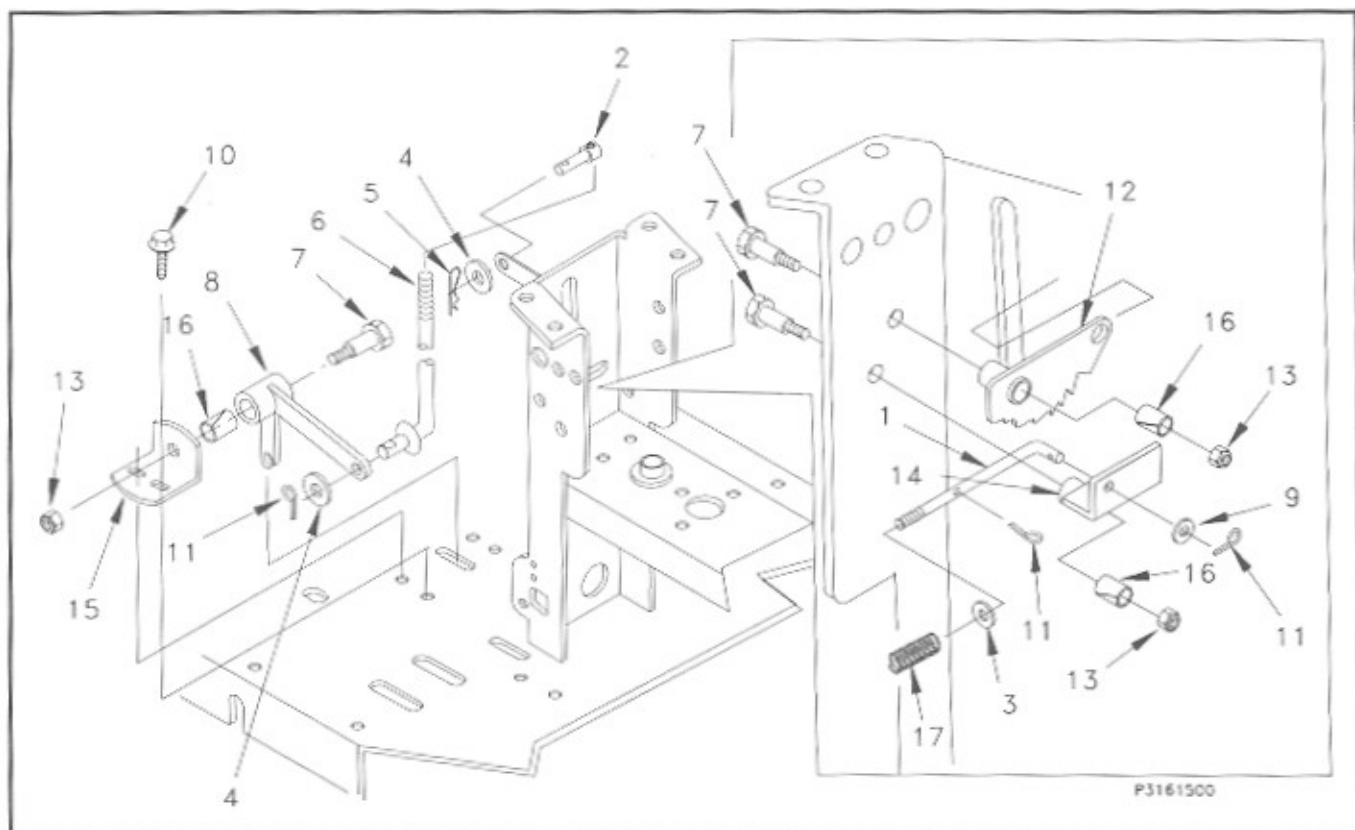

ITEM	PART NO.	DESCRIPTION
1	1808-346	Rod, Park Brake Latch
2	0502-031	Swivel, 3/8-16 x .390
3	2301-052	Washer, 5/16 SAE Flat
4	2301-022	Washer, 3/8 Flat (2)
5	0309-030	Hairpin
6	1205-025	Linkage, Park Brake
7	0212-035	Bolt, 1/2 Dia. Shoulder (3)
8	0217-033	Weldm't, Park Brake Bellcrank
9	2301-021	Washer, 5/16 Flat
10	0209-080	HWST, 5/16-18 x 3/4 (2)

ITEM	PART NO.	DESCRIPTION
11	1604-041	Pin, 3/32 x 5/8 Cotter (3)
12	1803-019	Ratchet, Park Brake
13	1401-139	Nut, 3/8-16 Hex Nyloc (3)
14	0214-591	Brk't, Park Brake
15	0214-567	Brk't., Bellcrank Mount
16	0204-183	Bearing, Nyliner (3)
17	1916-198	Spring, Compression

HYDRAULIC SYSTEM

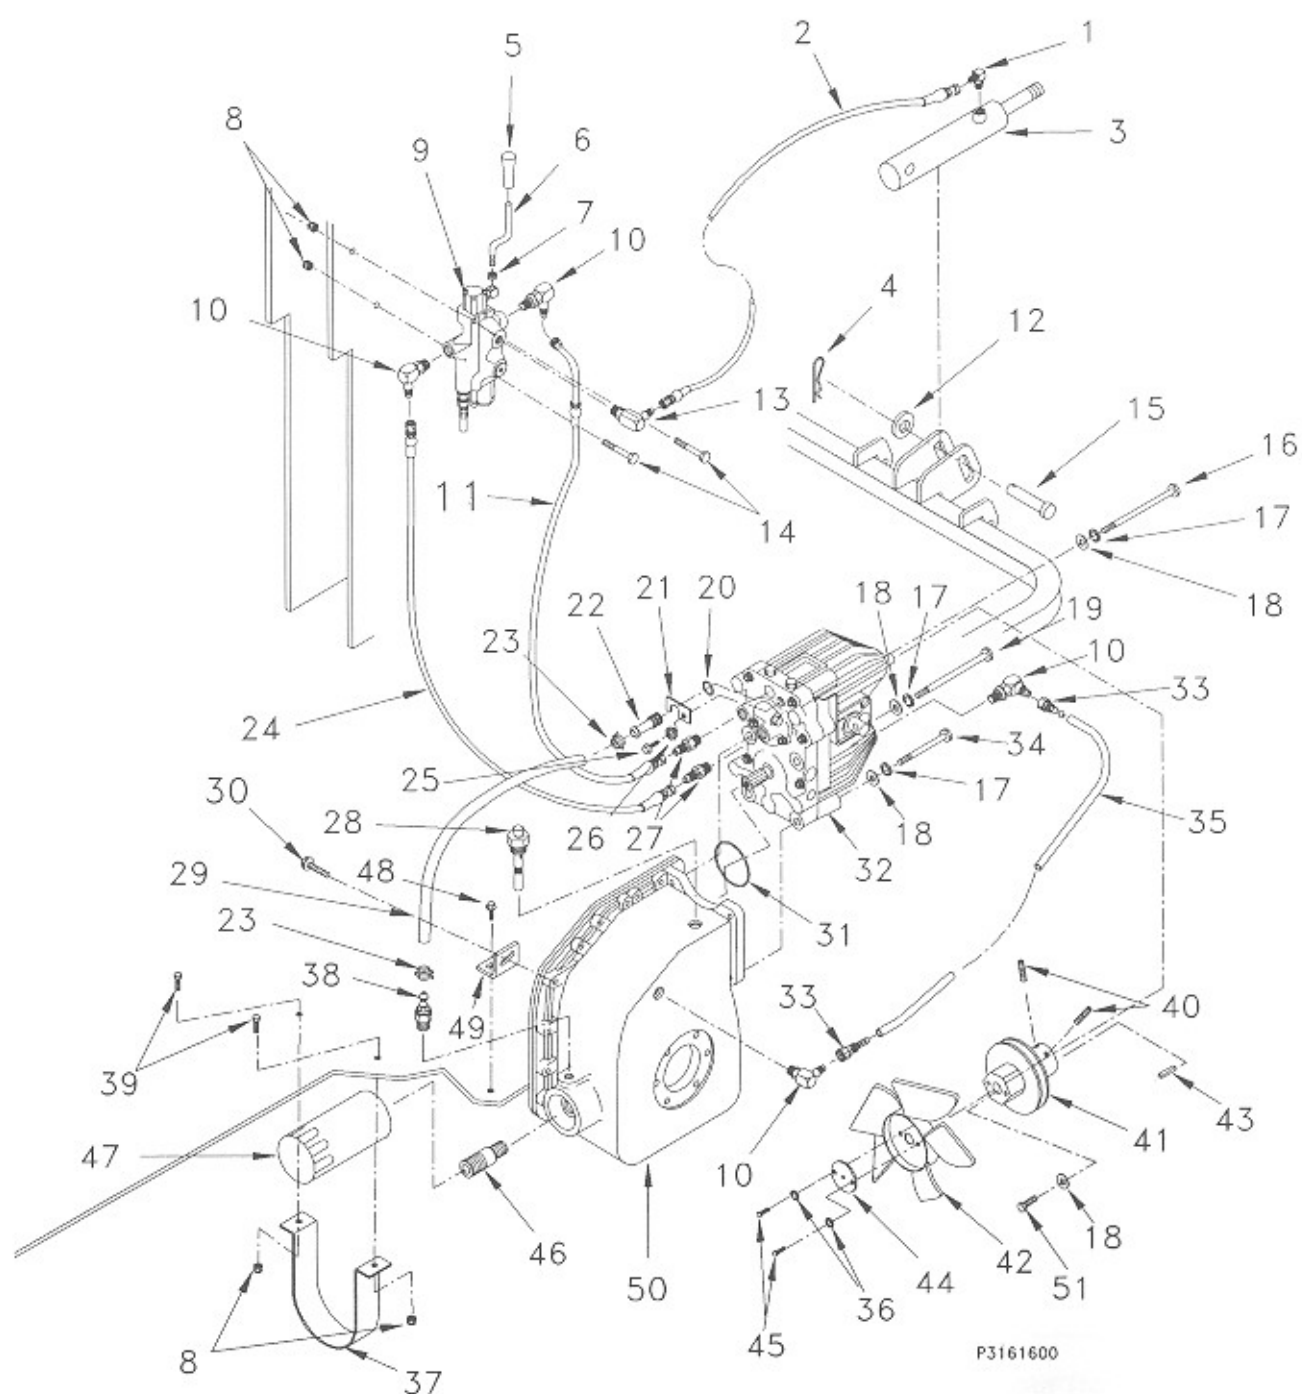


P3161600

HYDRAULIC SYSTEM


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0101-116	Adapter, 6801-4	26	2301-108	Washer, 1/4 Ext. Star Lock
2	0812-114	Hose, Lift Cylinder 56"	27	0101-118	Adapter, 6400-6 (2)
3	0319-014	Cylinder, Lift Assembly	28	1606-075	Dipstick, Transaxle
	1105-165	Kit, For 0309-014 Cylinder	29	0812-067	Hose, Hydraulic
4	0309-064	Clip, Hairpin	30	0209-859	TFS, 5/16 C x 1-1/4
5	P/O Item 9	Grip	31	1902-082	O-Ring, 2-5/8 x 2-7/8 x 1/8
6	P/O Item 9	Lever	32	2006-089	Transmission, BDU 21L-311
7	P/O Item 9	Nut	33	0101-167	Adapter, 1/4 Hose (2)
8	1401-141	Nut, 5/16 C Nyloc (4)	34	0209-161	HHCS, 5/16 C x 3 (2)
9	2201-044	Valve, Control	35	0812-113	Line, 12-5/8
10	0101-158	Adapter, (4)	36	2301-003	Washer, 1/4 Lock (2)
11	0812-126	Hose, Hydraulic	37	0704-367	Guard, Oil Filter
12	2301-344	Washer	38	0101-153	Fitting, Hose
13	0101-117	Adapter, 6801-6	39	0209-114	HHCS, 5/16 C x 1 (2)
14	0209-144	HHCS, 5/16 C x 2-1/4 (2)	40	1901-009	Screw, Set 5/16 C x 5/16 (2)
15	1604-201	Pin, 5/8 x 3 Clevis	41	1608-432	Pulley, Trans.
16	0209-831	HHCS, 5/16 C x 5-1/2	42	0612-006	Fan, Blower
17	2301-004	Washer, 5/16 Lock (3)	43	1102-059	Key, 5mm x 1-1/4
18	2301-020	Washer, 5/16 Flat (4)	44	2301-355	Washer, Trans. Pulley
19	0209-856	HHCS, 5/16 C x 6	45	0209-021	HHCS, 1/4 C x 3/4 (2)
20	1806-158	O-Ring	46	0101-155	Adapter, Filter
21	1206-004	Lock, Fitting	47	0610-018	Filter, Oil Transaxle
22	0603-012	Fitting	48	0209-080	HWST, 5/16-18 X 3/4
23	0307-039	Clamp, Hose (2)	49	0214-589	Brk't, Anti-Torque
24	0812-115	Hose, Hydraulic 27"	50	2006-092	Differential
25	0209-855	Screw, 6mm BTN SOC HD	51	0209-843	Bolt, 6m-1.0 x 20mm

HYDROSTATIC DIFFERENTIAL

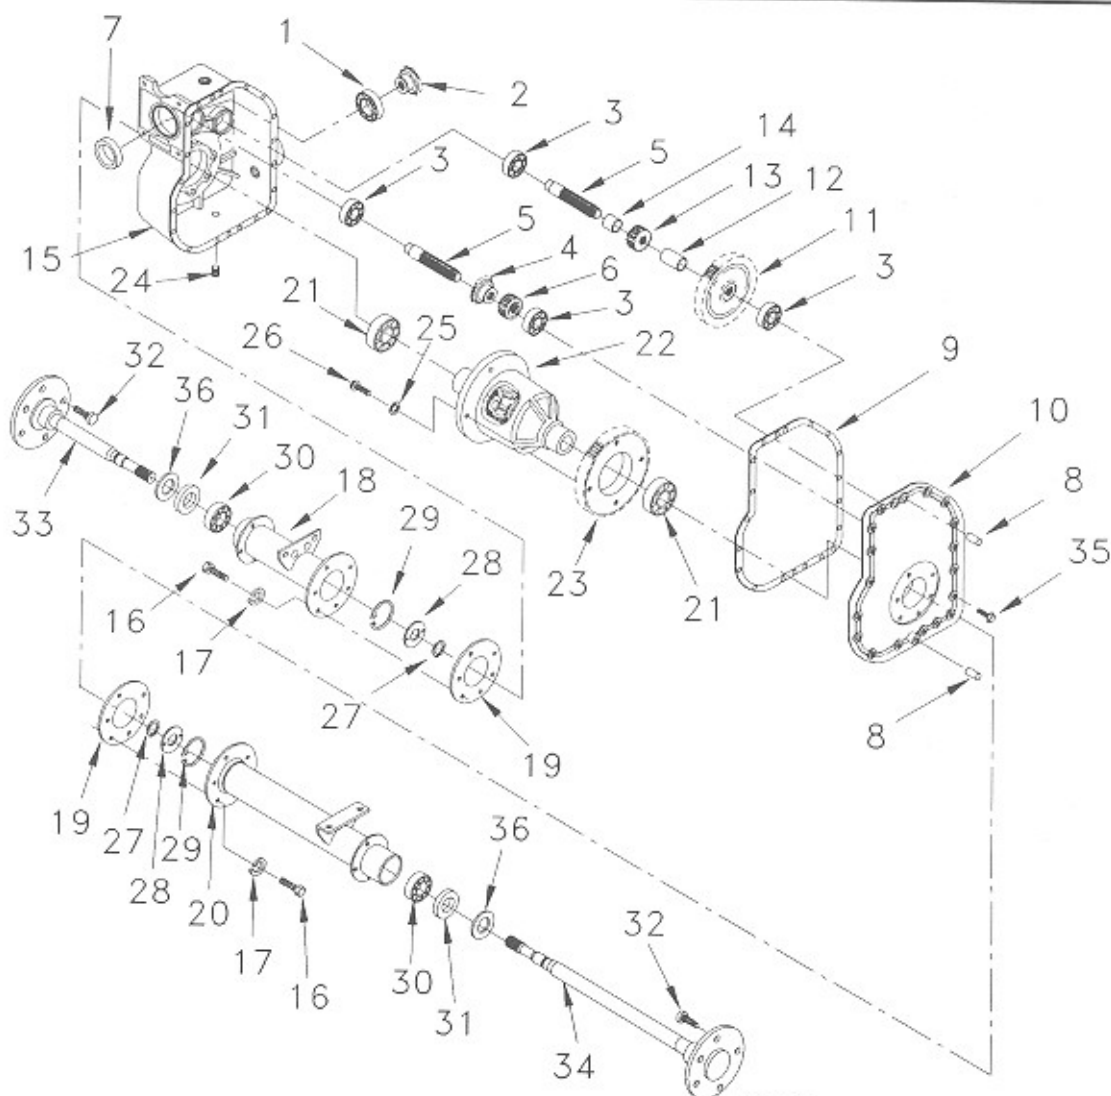

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0204-159	Bearing, Ball	19	0701-022	Gasket, (2)
2	0702-148	Gear, Miter	20	0806-126	Housing, Axle LH
3	0204-040	Bearing, Ball (4)	21	0204-039	Bearing, Differential (2)
4	0702-147	Gear, Miter	22	0403-011	Differential, 24 T.
5	1904-154	Shaft, Internal Drive (2)	23	0702-054	Gear, Transmission
6	0702-057	Gear, Transmission	24	1606-070	Plug, Drain
7	1913-283	Spacer, Transmission	25	2301-014	Washer, 3/8 Internal Star (4)
8	1604-191	Dowel, Pin (2)	26	0209-865	Scr, 3/8-24 x 1 Btn. Hd.Soc. (4)
9	0701-103	Gasket, Case	27	1806-155	Ring, Retaining (2)
10	0304-165	Case, Half Shallow	28	2301-349	Washer, Thrust (2)
11	0702-053	Gear, Transmission	29	1207-025	Ring, Lock (2)
12	1912-034	Sleeve, Long	30	0204-038	Bearing, Axle (2)
13	0702-052	Gear, Transmission	31	1902-012	Seal, Transmission (2)
14	1912-033	Sleeve, Short	32	0209-861	Bolt, 7/16-20 x 1-7/16 (10)
15	0304-172	Case, Half Deep	33	0103-118	Axle, Short Transmission
16	0209-313	Bolt, 3/8-16 x 7/8 Hex (12)	34	0103-119	Axle, Long Transmission
17	2301-006	Washer, 3/8 Lock (16)	35	0209-088	HWST, 5/16 x 1 (17)
18	0806-125	Housing, Axle RH	36	2301-361	Washer, 1-1/2 ID x 2 OD (2)


BRAKE DRUM & PADS

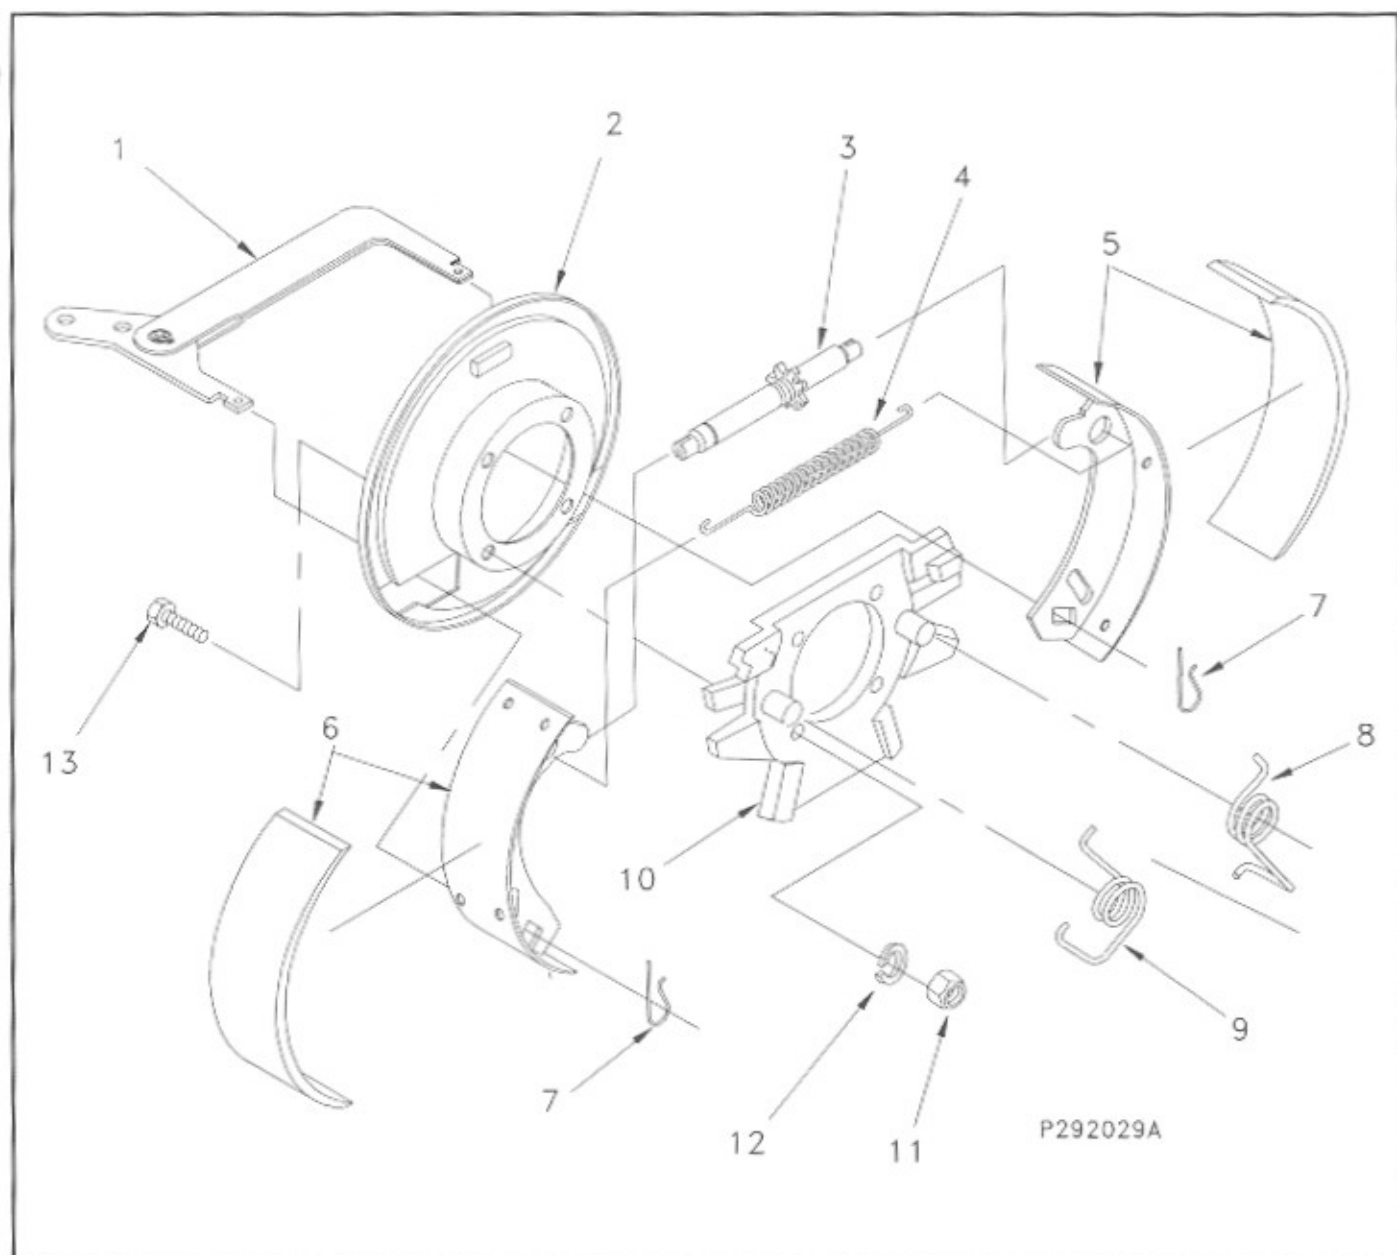

0217-016 Complete Asm'y RH
0217-017 Complete Asm'y LH

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1201-095	Assm. Park Br. Lever (2)	8	1916-144	Spring, Shoe Ret. (RH) Rd (2)
2	1906-015	Shield, Dust (2)	9	1916-143	Spring, Shoe Ret. (LH) Gn (2)
3	1901-216	Assem., Adj. Screw Nut (2)	10	1935-003	Torque Spider, Finished (2)
4	1916-145	Spring, Adj. Screw (Blue) (2)	11	1401-020	Nut, 5/16C Hex (8)
5	1908-013	Assem., Shoe & Lining (2)	12	2301-004	Washer, 5/16 Lock (8)
6	1908-012	Assem., Shoe & Lining (2)	13	0209-120	HHCS, 5/16C x 1-1/4 (8)
7	1604-133	Retainer, Lever Pin (4)			


SUNDSTRAND BDU-21L-311 & 111 TRANSMISSIONS

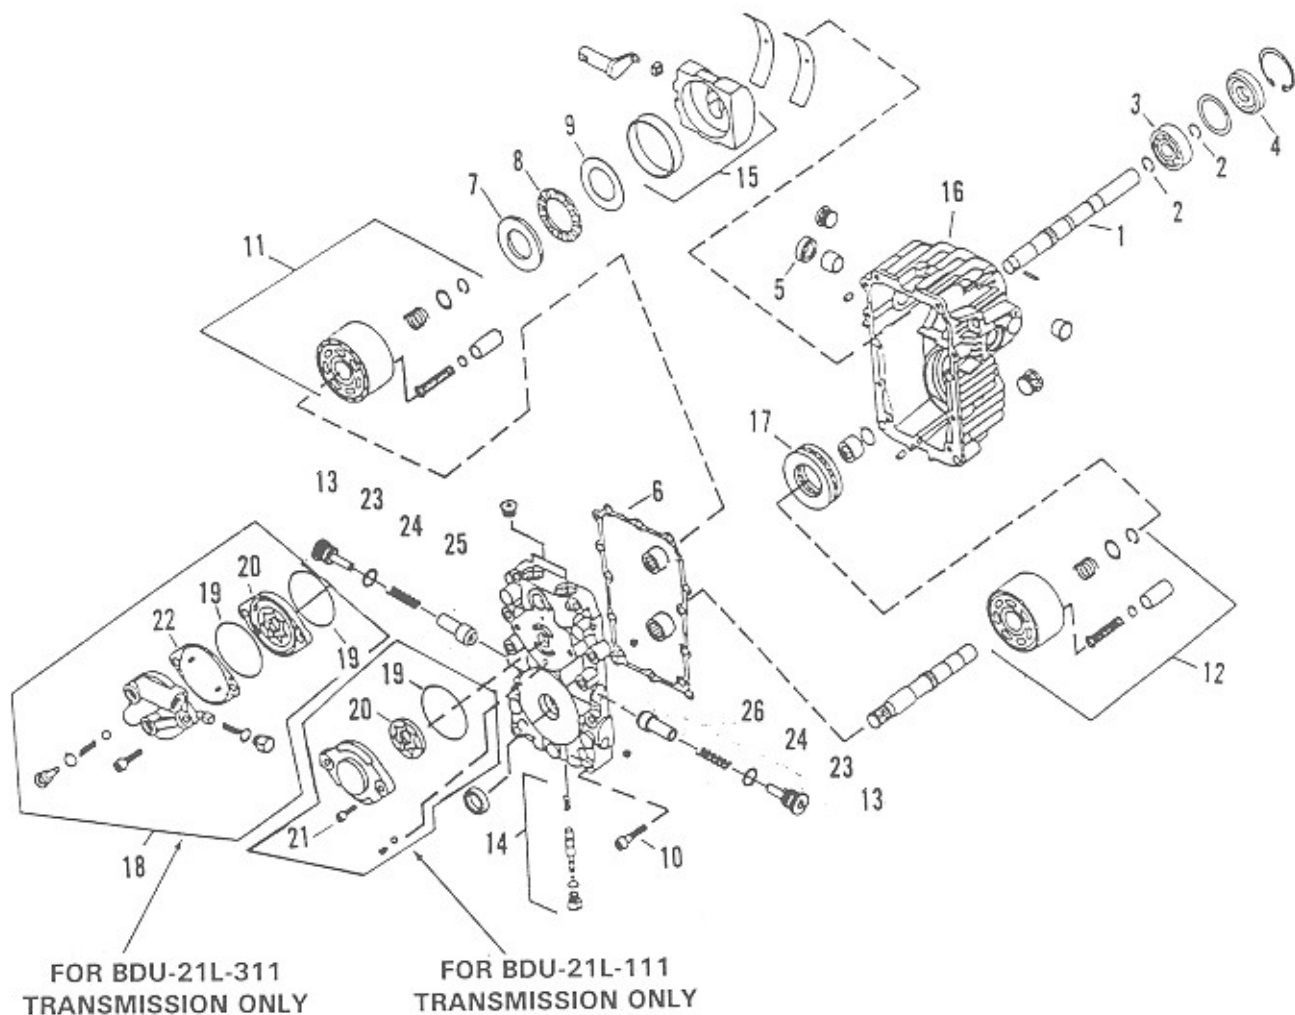

ITEM	PART NO.	DESCRIPTION
1	1904-296	Shaft
2	1804-031	Ring, Retaining
3	0204-165	Bearing, Ball
4	1902-078	Seal, Lip
5	1902-077	Seal, Lip
6	0701-104	Gasket, Center Section
7	1913-303	Plate, Thrust
8	0204-167	Bearing, Roller Thrust
9	1913-304	Plate, Thrust
10	1901-236	Screw
11	1105-138	Kit, Cylinder Block
12	1105-139	Kit, Cylinder Block
13	1606-076	Plug, Check Valve (2)

ITEM	PART NO.	DESCRIPTION
14	1105-141	Kit, Bypass Valve
15	1105-142	Kit, Splash Plate
16	1105-143	Kit, Housing
17	0204-166	Bearing, Needle
18	1105-144	Kit, Charge Relief Valve
19	1902-079	O Ring
20	1810-010	Assembly, Gerotor
21	1901-237	Screw
22	1907-066	Shim, Charge Pump
23	1602-081	O Ring, Check Valve (2)
24	1616-195	Spring, Check Valve (2)
25	1616-007	Poppet, .024
26	1616-005	Poppet, Blank


STEERING COMPONENTS DUAL WHEEL

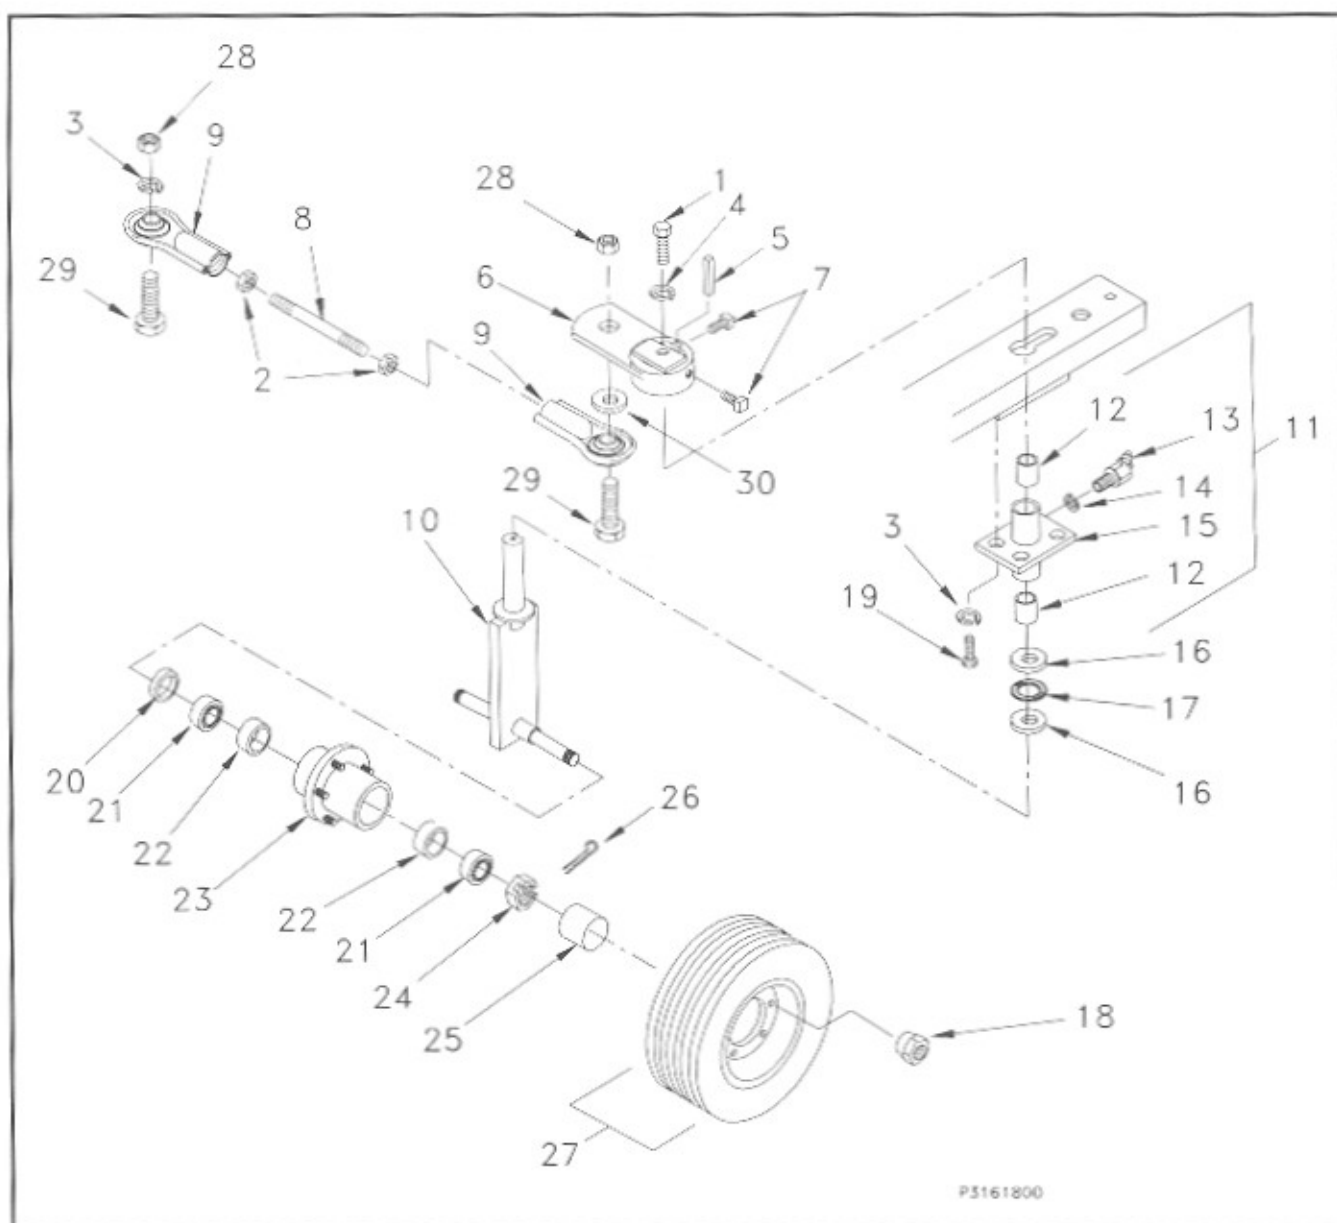

P3161800


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0209-314	HHCS, 3/8 C x 1	16	2301-097	Washer, Thrust (2)
2	1401-050	Nut, 1/2 F Hex (2)	17	0204-078	Bearing, 1/2 Thrust
3	2301-008	Washer, 1/2 Lock (5)	18	1401-057	Nut, 1/2 F Lug (10)
4	2301-006	Washer, 3/8 Lock	19	0209-480	HHCS, 1/2 C x 1 (4)
5	1102-065	Key, 3/8 x 1 Square	20	1804-025	Seal, Retainer (2)
6	0311-101	Arm, Steering	21	0204-075	Bearing, Cone (4)
7	1901-034	Screw, Set 3/8 C x 3/4 (2)	22	0312-016	Race, Bearing (4)
8	1205-029	Linkage, Steering Rod	23	0807-022	Hub, assembly (2)
9	0502-018	End Rod, 1/2 F RH Thd. (2)	24	1401-096	Nut, castle (2)
10	2501-062	Yoke, Steering	25	1906-010	Cover, Dust (2)
11	0807-045	Hub, Steering Assembly	26	1604-042	Pin, Cotter 1/8 x 1-1/2 (2)
12	0215-101	Bushing, Steering (2)	27	2305-024	Wheel, Assembly (2)
13	0603-011	Fitting, Zerk 1/4-20 45 degree	28	1401-237	Nut, 1/2-20 Hex Nyloc (2)
14	2301-003	Washer, 1/4 Lock	29	0209-510	Bolt, 1/2-20 x 1-3/4 (2)
15	0806-347	Flange, Rear Steering	30	2301-025	Washer, 1/2 Flat SAE

DECALS SAFETY MESSAGES

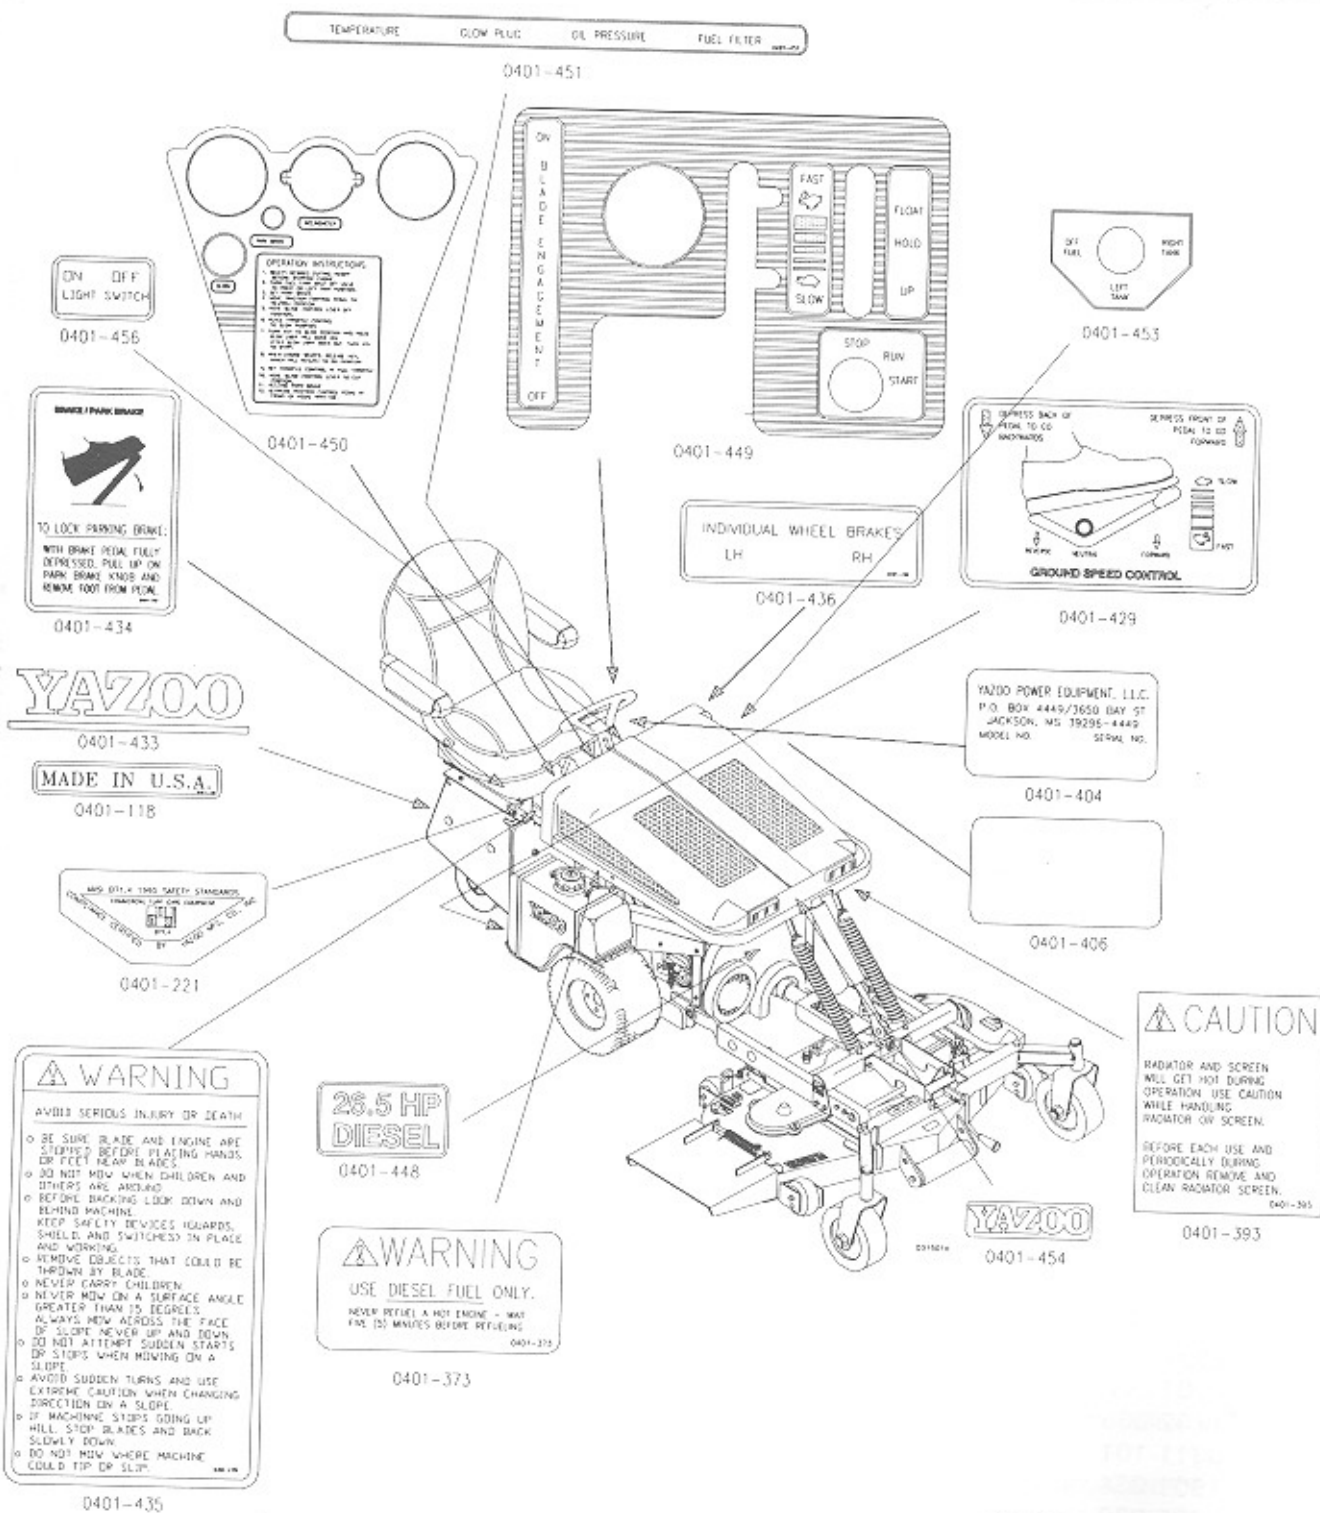


P3161900

ELECTRICAL SYSTEM HARNESS P/N 0811-066

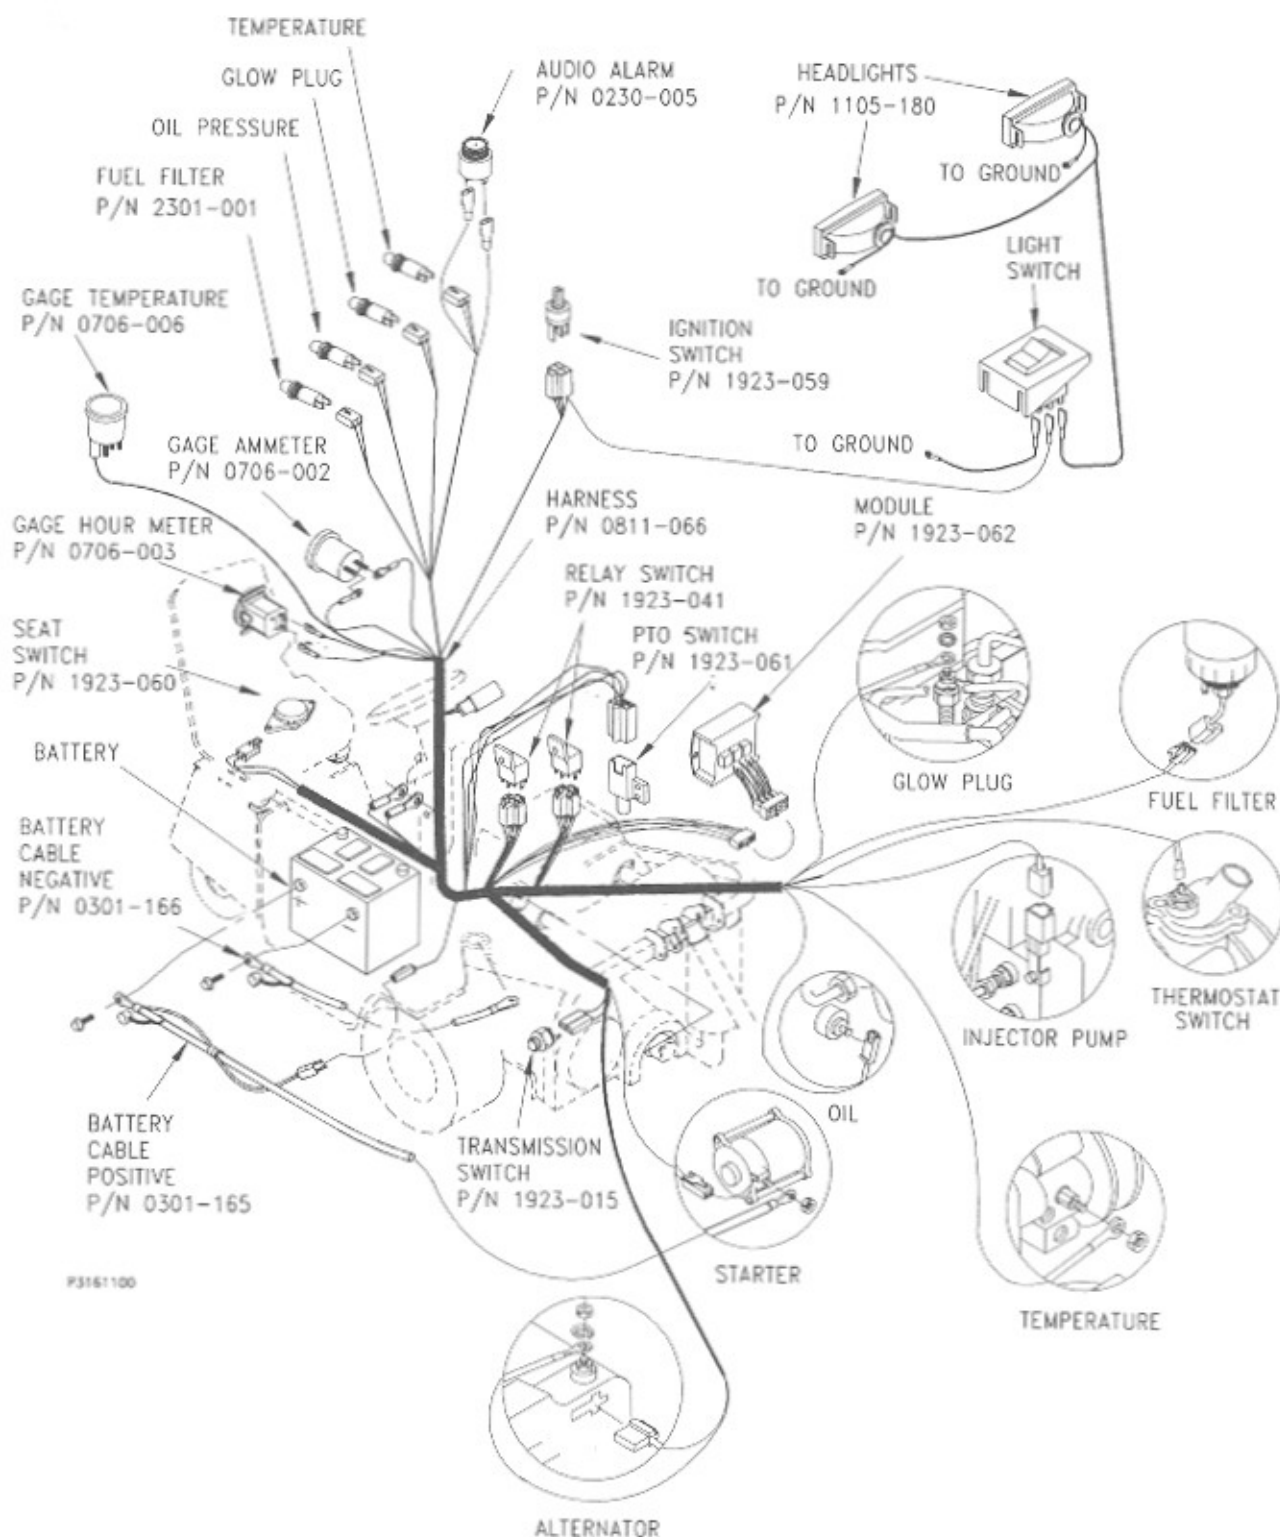

P3161100

ELECTRICAL SYSTEM HARNESS P/N 0811-066

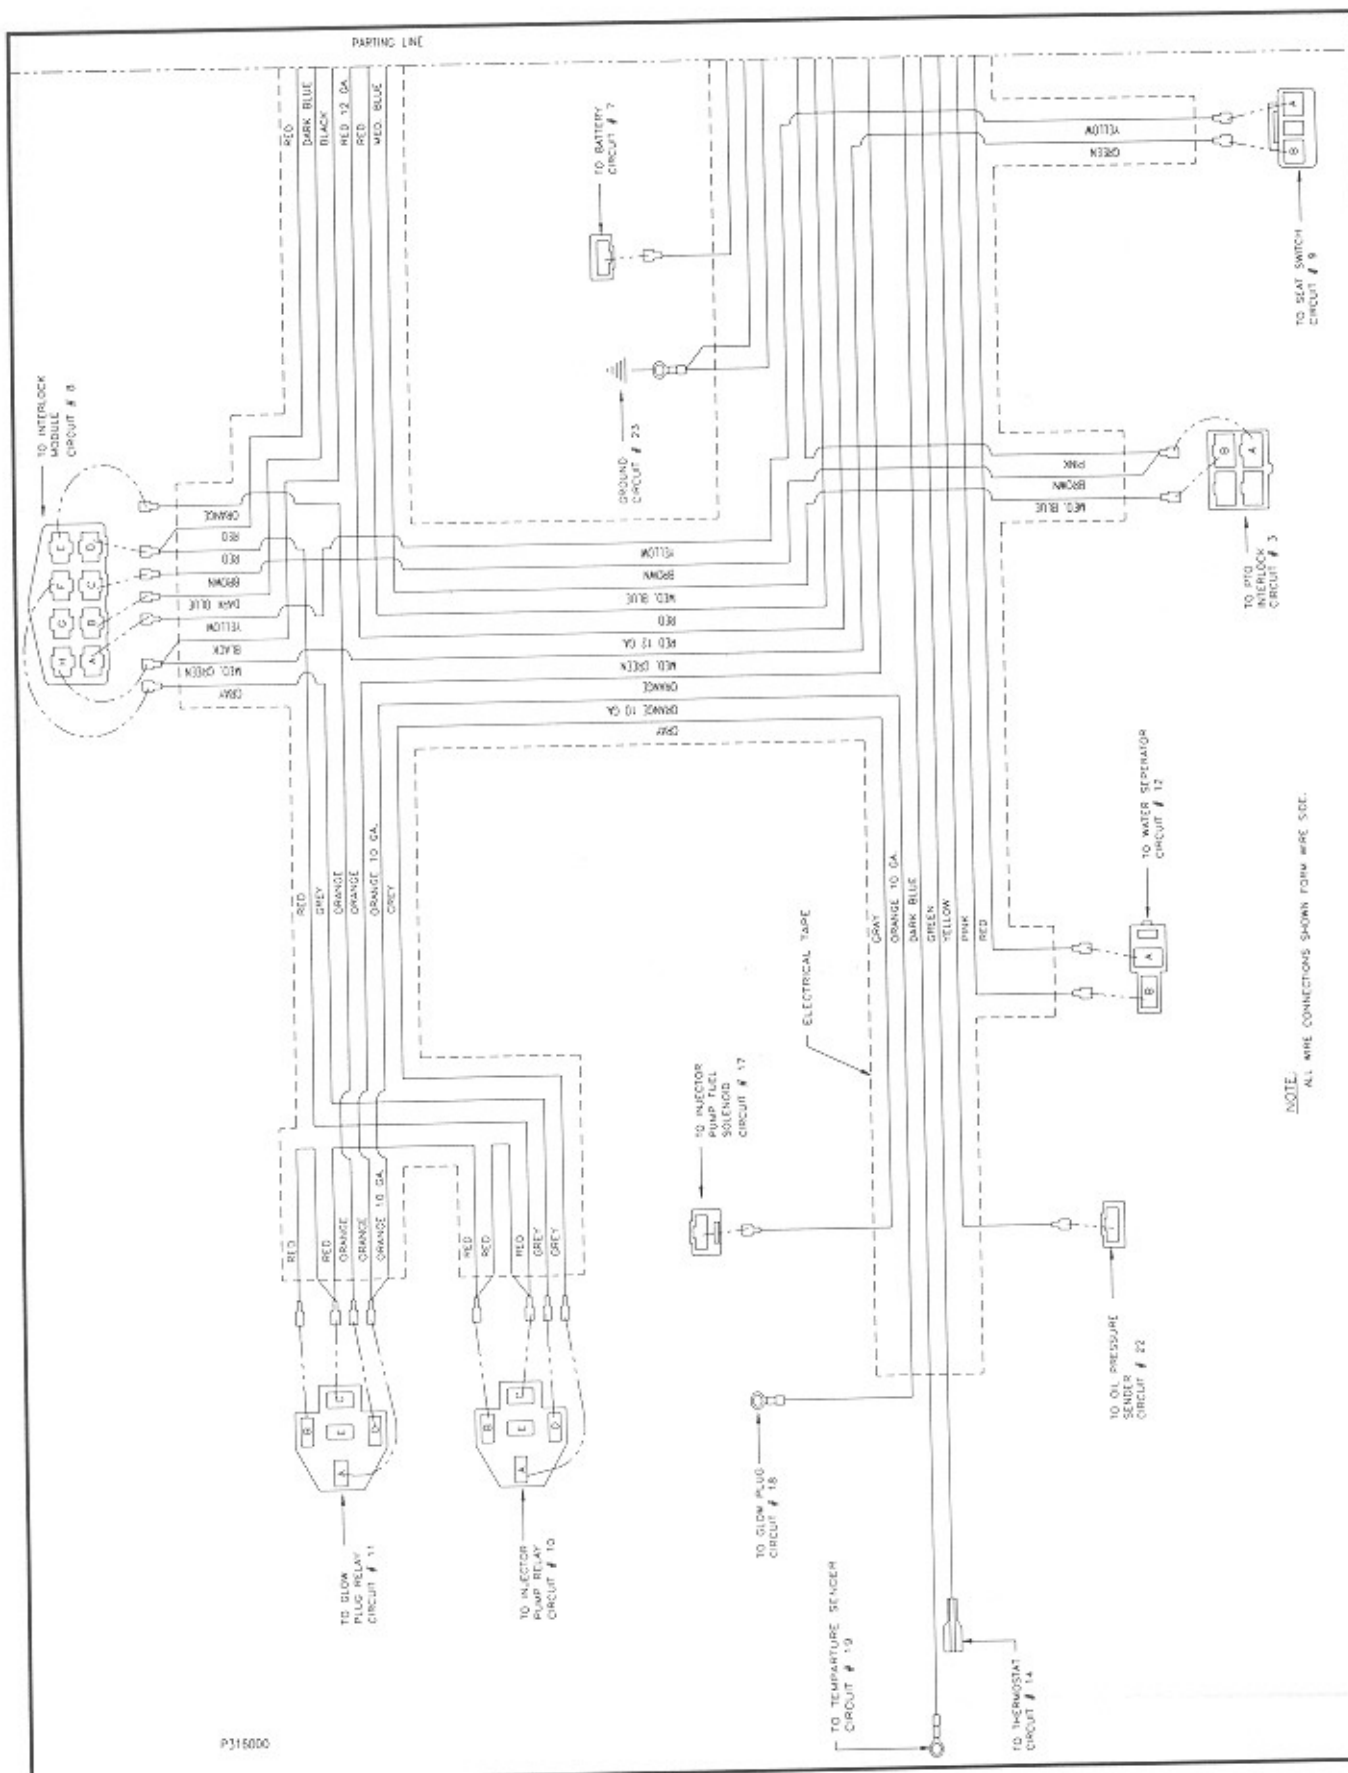

P315000

ELECTRICAL SYSTEM
HARNESS P/N 0811-066

